

USER'S MANUAL

Rev. 04/2024

REVEX 1PH

from 30A to 40A

017

M-RX1-30-40



CD Automation S.r.l.

Via Picasso, 34/36 - 20025 Legnano (MI)- Italy

Tel. +39 0331 577479 - Fax +39 0331 579479

E-mail: info@cdautomation.com - Web: www.cdautomation.com



Declaration of conformity

Declaration of conformity-Dichiarazione di Conformità

PRODUCT MANUFACTURER/ PRODUTTORE:



CD Automation S.R.L.
Controllers, Drives & Automation

Via Picasso, 34/36 - 20025 Legnano (MI)- Italy
P.I. 08925720156 -Tel. +39 0331 577479 - Fax +39 0331 579479
E-mail: info@cdautomation.com - Web: www.cdautomation.com

Declare that the product / Dichiaro che il prodotto:

REVEX 1Ph 30-40A

PRODUCT DESCRIPTION: Electric power control

SCOPE OF APPLICATION: Thermal control process

DESCRIZIONE DEL PRODOTTO: Unità di controllo potenza elettrica

UTILIZZO: Controllo processi termici

FULFILLS THE REQUIREMENTS OF THE STANDARD:

Electrical safety Standard	EN60947-1: 2007 + A1 2011, A2 2014 EN60947-4-3: 2014
Generic Emission standard	EN60947-4-3: 2014 Group 1 Class A emissions
Generic Immunity standard	EN60947-4-3: 2014 Industrial Immunity

SODDISFA I REQUISITI DELLA NORMA:

Specifica di sicurezza	EN60947-1: 2007 + A1 2011, A2 2014 EN60947-4-3: 2014
Specifica sulle emissioni	EN60947-4-3: 2014 gruppo 1 emissioni classe A
Specifica sulle Immunità	EN60947-4-3: 2014 Immunità industriale

CDAutomation declares that the products above mentioned are conforming to the directive
CDAutomation dichiara che i prodotti sopra menzionati sono conformi alla direttiva
Alla direttiva Bassa Tensione (low Voltage) **EMC directive updated 2014/30/EU,**
Low Voltage Directive updated 2014/35/EU

Issued on: 20/03/2017
Data di emissione: 20/03/2017

Amministratore Unico e
Legale Rappresentante
Simone Brizzi





Declaration of conformity

Declaration of conformity-Dichiarazione di Conformità



PRODUCT MANUFACTURER/ PRODUTTORE:



CD Automation S.R.L.
Controllers, Drives & Automation

Via Picasso, 34/36 - 20025 Legnano (MI)- Italy
P.I. 08925720156 -Tel. +39 0331 577479 - Fax +39 0331 579479
E-mail: info@cdautomation.com - Web: www.cdautomation.com

Declare that the product / Dichiaro che il prodotto:

REVEX 1Ph 30-40A

PRODUCT DESCRIPTION: Electric power control

SCOPE OF APPLICATION: Thermal control process

DESCRIZIONE DEL PRODOTTO: Unità di controllo potenza elettrica

UTILIZZO: Controllo processi termici

FULFILLS THE REQUIREMENTS OF THE STANDARD:

Electrical safety Standard	EN60947-1: 2007 + A1 2011, A2 2014 EN60947-4-3: 2014
Generic Emission standard	EN60947-4-3: 2014 Group 1 Class A emissions
Generic Immunity standard	EN60947-4-3: 2014 Industrial Immunity

SODDISFA I REQUISITI DELLA NORMA:

Specifica di sicurezza	EN60947-1: 2007 + A1 2011, A2 2014 EN60947-4-3: 2014
Specifica sulle emissioni	EN60947-4-3: 2014 gruppo 1 emissioni classe A
Specifica sulle Immunità	EN60947-4-3: 2014 Immunità industriale

CDAutomation declares that the products above mentioned are conforming to the directive
CDAutomation dichiara che i prodotti sopra menzionati sono conformi alla direttiva
Alla direttiva Bassa Tensione (low Voltage) **EMC directive updated 2014/30/EU,**
Low Voltage Directive updated 2014/35/EU

Issued on: 07/03/2022
Data di emissione: 07/03/2022

Amministratore Unico e
Legale Rappresentante
Simone Brizzi



Important warnings for safety

This chapter contains important information for the safety. The not observance of these instructions may result in serious personal injury or death and can cause serious damages to the Thyristor unit and to the components system included.

The installation should be performed by qualified persons.

In the manual are used symbols to give more evidence at the notes of safety and operativity for the attention for the user:

	This icon is present in all the operational procedures where the Improper operation may result in serious personal injury or death by Electrical Shock Hazard Symbol (a lightning bolt in a triangle) precedes an electric shock hazard CAUTION or WARNING safety statement.
	Warning or Hazard that needs further explanation than the label on unit can provide. Consult User's Guide for further information.
	Unit is compliant with European Union directives. See Declaration of Conformity for further details on Directives and Standards used for Compliance.
	ESD Sensitive product, use proper grounding and handling techniques when installing or servicing product.
	Do not throw in trash, use proper recycling techniques or consult manufacturer for proper disposal.

A **"NOTE"** marks a short message to alert you to an important detail.

A **"CAUTION"** safety alert appears with information that is important for protecting your equipment and performance. Be especially careful to read and follow all cautions that apply to your application.

A **"WARNING"** safety alert appears with information that is important for protecting you, others and equipment from damage. Pay very close attention to all warnings that apply to your application.

Safety notes



WARNING! To avoid damage to property and equipment, injury and loss of life, adhere to applicable electrical codes and standard wiring practices when installing and operating this product. Failure to do so could result in damage, injury and death.























AVERTISSEMENT! Pour éviter d'endommager la propriété et l'équipement, les blessures et la perte de vie, respecter les codes électriques en vigueur et les pratiques de câblage standard au moment de l'installation et de l'utilisation de ce produit. Dans le cas contraire, cela peut entraîner la mort, des blessures graves ou des dommages.



WARNING! All service including inspection, installation, wiring, maintenance, troubleshooting, fuse or other user serviceable component replacement must be performed only by properly qualified personnel. Service personnel must read this manual before proceeding with work. While service is being performed unqualified personnel should not work on the unit or be allowed in the immediate vicinity.

-  **AVERTISSEMENT!** Tous les services, y compris l'inspection, l'installation, le câblage, l'entretien, le dépannage, le remplacement de fusibles ou d'autres composants pouvant être réparés par l'utilisateur, doivent être effectués uniquement par un personnel d'entretien qualifié. Le personnel de service doit lire ce manuel avant d'effectuer tout travail. Pendant que l'entretien est exécuté, tout personnel non qualifié ne doit effectuer de travail sur l'appareil ni se trouver à proximité.
-  **WARNING!** When in use the power controller is connected to dangerous voltages. Do not remove the protective covers without first disconnecting and preventing power from being restored while servicing the unit.
-  **AVERTISSEMENT!** Au moment de l'utilisation, le régulateur de puissance est connecté à des tensions dangereuses. Ne retirer aucun couvercle de protection sans d'abord débrancher l'appareil et ainsi empêcher l'alimentation d'être rétablie pendant l'entretien.
-  **WARNING!** Do not use in aerospace or nuclear applications.
-  **AVERTISSEMENT!** Ne pas utiliser pour les applications aérospatiales ou nucléaires.
-  **WARNING!** The units are not developed to manage capacitive loads.
-  **AVERTISSEMENT!** Les unités ne sont pas développées pour la conduite de charges capacitatives.
-  **WARNING!** The power controller's protection rating is IP20 with all covers installed and closed. It must be installed in an enclosure that provides all the necessary additional protections appropriate for the environment and application.
-  **AVERTISSEMENT!** L'indice de protection du régulateur de puissance est de IP20 lorsque les couvercles sont installés et fermés. L'appareil doit être installé dans une enceinte qui assure toute la protection supplémentaire nécessaire pour l'environnement et l'application.
-  **WARNING!** Ground the power controller via the provided protective earth grounding terminal. Verify ground is within impedance specifications. This should be verified periodically.
-  **AVERTISSEMENT!** Mise à la terre du régulateur de puissance par le biais de la borne de prise de terre de protection fournie. Vérifier que la prise de terre est conforme aux spécifications de l'impédance. Cela doit être vérifié périodiquement.
-  **WARNING!** Electric Shock Hazard: when the power controller has been energized, after shutting off the power, wait at least one minute for internal capacitors to discharge before commencing work that brings you in to contact with power connections or internal components.
-  **AVERTISSEMENT!** Risque de décharges électriques: lorsque le régulateur de puissance est mis sous tension, après avoir été éteint, attendre au moins une minute pour que les condensateurs internes se déchargent avant de commencer tout travail incluant le contact avec les connexions électriques ou les composants internes.
-  **WARNING!** The installation must be protected by electromagnetic circuit breakers or by fuses. The semiconductor fuses located inside the power controller are classified for UL as supplementary protection for semiconductor devices. They are not approved for branch circuit protection.
-  **AVERTISSEMENT!** L'installation doit être protégée par des disjoncteurs électromagnétiques ou des fusibles. Les fusibles pour semi-conducteurs situés à l'intérieur du régulateur de puissance sont classés UL comme protection supplémentaire pour les dispositifs pour semi-conducteurs. Ils ne sont pas approuvés pour la protection des circuits de dérivation.
-  **WARNING!** When making live voltage or current measurements, use proper personal protective equipment for the voltages and arc-flash potentials involved.
-  **AVERTISSEMENT!** Au moment de relever des mesures de tension ou de courant en direct, utiliser un équipement de protection individuelle approprié pour les tensions et les potentiels d'arc électrique concernés.

-  **WARNING!** Verify the voltage and current ratings of the power controller are correct for the application.
-  **AVERTISSEMENT!** Vérifier que les valeurs de tension et de courant du régulateur de puissance sont correctes pour l'application.
-  **CAUTION:** To avoid compromising the insulation, do not bend wire or other components beyond their bend radius specifications.
-  **ATTENTION:** Pour éviter de compromettre l'isolation, ne pas plier le fil ou tout autre composant au-delà de ses spécifications en matière de rayon de courbure.
-  **CAUTION:** Protect the power controller from high temperature, humidity and vibrations.
-  **ATTENTION:** Protéger le régulateur de puissance contre les températures élevées, l'humidité et les vibrations.
-  **CAUTION:** The power controller warranty is void if the tested and approved fuses are not used.
-  **ATTENTION:** La garantie du régulateur de puissance est nulle si aucun fusible testé et approuvé n'est utilisé.
-  **CAUTION:** Only trained and authorized personnel should access and handle the internal electronics and they must follow proper electro-static prevention procedures.
-  **ATTENTION:** Seul le personnel formé et autorisé peut accéder aux composants électroniques internes et les gérer, et il doit se conformer à des procédures de prévention électrostatique appropriées.
-  **CAUTION:** Install an appropriately sized RC filter across contactor coils, relays and other inductive loads.
-  **ATTENTION:** Installer un filtre RC de dimensions appropriées sur les bobines du contacteur, les relais et autres charges par induction.
-  **CAUTION:** The thyristor units here described have been designed for use with sinusoidal networks with nominal frequency 50-60 Hz. Any application with NON-SINUSOIDAL, distorted or disturbed networks could compromise the correct operation of the unit.
-  **ATTENTION:** Les unités de thyristors décrites ici ont été conçues pour être utilisées avec des réseaux sinusoïdaux d'une fréquence nominale de 50 à 60 Hz. Toute application utilisant des réseaux NON SINUSOÏDAUX, déformés ou perturbés peut compromettre le bon fonctionnement de l'appareil.
-  **NOTE:** Provide a local disconnect to isolate the power controller for servicing.
-  **REMARQUE:** Fournir une déconnexion locale afin d'isoler le régulateur de puissance pour l'entretien.
-  **NOTE:** The nominal current is specified for ambient temperatures at or below 40° C. Ensure the application design allows for adequate cooling of each power controller. The power controller must be mounted vertically. The cooling design must prevent air heated by one power controller from causing power controllers mounted above to exceed the ambient operating temperature limit. When power controllers are mounted side by side allow a minimum spacing of 15mm between them.
-  **REMARQUE:** Le courant nominal est précisé pour des températures ambiantes égales ou inférieures à 40°C. S'assurer que la conception de l'application permette le refroidissement adéquat de chaque régulateur de puissance. Le régulateur de puissance doit être monté verticalement. La conception de refroidissement doit empêcher l'air chauffé par le régulateur de puissance de dépasser la limite de température de fonctionnement ambiante de la part des régulateurs de puissance montés au-dessus. Lorsque les régulateurs de puissance sont montés côte à côte, il faut conserver un espacement minimal de 15 mm entre les deux.
-  **NOTE:** Use only copper cables and wires rated for use at 90°C or greater.
-  **REMARQUE:** N'utiliser que des câbles et des fils en cuivre pour l'utilisation à 90°C ou plus.



Maintenance

In order to have a corrected cooling, the user must clean the heat-sink and the protective grill of the fans. The frequency of this servicing depends on environmental pollution.

Also check periodically if the screw for the power cables and safety earth are tightened correctly (See Connection Diagram).

Warranty condition

Producer gives a 12 months warranty to its products.

The warranty is limited to repairing and parts substitution in our factory and does exclude products not properly used and fuses.

Warranty does not include products with serial numbers deleted. The faulty product should be shipped to Producer at customer's cost and our Service will evaluate if product is under warranty terms.

Substituted parts remain of Producer property.



CD Automation srl assumes no liability for any damage to persons or property deriving from tampering, from incorrect or improper use, or from any use not conforming to the characteristics of the controller and to the instructions in this User Manual.

[General terms and conditions](#)



Return Material Authorization (RMA)

Customers wishing to return any items, whether they are incorrectly supplied, faulty or damaged in transit, must first complete a Return Material Authorisation (RMA) form to obtain an RMA number from the Service Department.

A full repair service is available for customers. Prior to submitting the RMA form and returning products, customers are recommended to contact the technical support team to determine whether the issue can be resolved with telephone support.

How the RMA service works

The RMA form and details are available on our website:

<https://www.cdautomation.com/rma-english-version/>

When completing the RMA form, please be as specific as possible about the problem, including any pertinent application details. The more information given, the more quickly and more thoroughly the problem can be solved. The minimum information required is:

1. The Full Model Number
2. Quantity of units being returned
3. The units Serial Number(s)
4. A description of the problem ("faulty" or "unknown" is not sufficient)



Summary

●	Declaration of conformity	2
●	Important warnings for safety	4
●	Maintenance	7
1	Introduction	10
	1.1 Overview	10
2	Software Configurator	11
3	Quick Start	12
4	Basic Connections and sizing	13
5	Identification and Order Code	14
	5.1 Identification of the unit	14
	5.2 Order Code	15
6	Technical Specifications	16
	6.1 General features	16
	6.2 Input features	16
	6.3 Output features (power device)	16
	6.4 Environmental installation conditions	16
	6.5 Derating Curve	17
	6.6 Calculating flow capacity of the fan	17
7	Installation	18
	7.1 Dimensions and weight	19
	7.2 Fixing holes	19
8	Wiring instructions	20
	8.1 Command Terminals	21
	8.2 Schematic	22
	8.3 Connection Diagram	24
9	Control Panel	25
	9.1 Menu navigation	26
	9.2 Led indicators	27
	9.3 Displayed alarms	27
	9.4 Parameter list	28
10	Using the Configurator	40
	10.1 Typical Uses	40
	10.2 Communicating with Power Controllers	40
	10.3 Recipes	40
	10.4 How to	40
	10.5 Using the Configurator	42
	10.6 Software General information	44

11	Configurable Inputs and Outputs.	51
11.1	Digital Inputs	51
11.2	Analog Input 1: Set Point	51
11.3	Analog Input 2: Set Point, Feedback or Current Limit Set Point.	52
11.4	Alarms and Alarm Relay Output.	52
12	Alarm description.	53
12.1	Heater Break Alarm.	53
12.2	AUX High	54
12.3	AUX Low	54
12.4	ComError	54
12.5	AUX Line Loss	54
12.6	Line Loss	54
12.7	I Limit.	54
12.8	SHRT	54
13	"Enable" Function in static Unit	55
13.1	Using Digital Input only	55
13.2	Using Serial Port RS485 only.	56
13.3	Using Digital Input + Serial Port RS485	56
13.4	Using FieldBus only	57
13.5	Using Digital Input + FieldBus	58
14	Firing type.	59
14.1	Zero Crossing.	59
14.2	Single Cycle	59
14.3	Burst Firing	59
14.4	Soft Start with Burst Firing	60
14.5	Phase Angle	60
14.6	Soft Start with Phase Angle	60
14.7	Delay Triggering with Burst Firing	61
14.8	Half Cycle.	61
15	Current Limit	62
15.1	Current Limit Setting	62
15.2	Current Limit tuning procedure.	62
16	Heater bakeout function	63
16.1	Using Heater Bakeout	64
17	Control Mode (feed-back)	65
18	Electronic boards	66
18.1	Supply the Electronic Board	66
19	RS485 Serial port	67
19.1	Fieldbus Module	67
20	Fuses and Fuse Holder	68


1

Introduction

A thyristor unit is semiconductor device which acts as a switch formed by two thyristors in antiparallel.

To switch on the alternating current the input signal will be on and the thyristor will switch off at first Zero Crossing voltage with no input signal.

The benefits of thyristor units compared with electromechanical contactors are numerous: no moving parts, no maintenance and capacity to switch very fast. Thyristors are the only solution to control transformers and special loads that change resistance with temperature and with age.

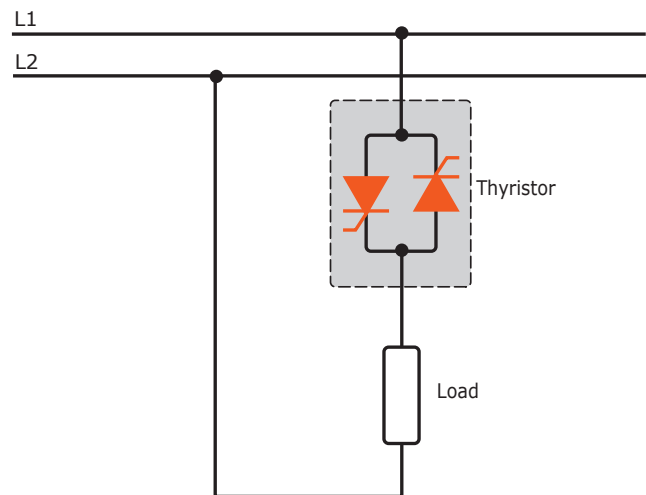

1.1 Overview

Heater bakeout

- Protects heater upon start up.
- Eliminates labor and time associated with checking for wet heaters.

Current transformer and user interface

- Saves installation time and eases setup and commissioning.
- Delivers a user-friendly, intuitive interface

Industry-leading design and serviceability

- Offers a robust SCR design to meet a rugged industrial environment's high quality and reliability needs.
- Provides quick and easy access to maintain and service fuses and individual legs in minimal time.
- Enables fast troubleshooting by providing helpful thermal system diagnostics.

Comprehensive power controller range

- Provides wide range of options from simple single phase to complex three-phase loads to 600V.

100kA short circuit current rating (SCCR) (Not reviewed by UL®)

- Enables greater protection in the event of a short circuit.

c-UL® 508 Listed - PRELIMINARY, to be tested

- Shortens project schedules, agency testing and expenses.

Control modes: contactor, voltage, current or power

- Satisfies a wide range of demanding thermal applications.

Load firing modes: zero-cross, burst fire, phase angle, soft start, half-cycle, single-cycle, delayed triggering

- Handles a wide range of load types including nichrome, medium and long waveform infrared lamps, moly, transformers, silicon carbide, UV lamps and tungsten.
- Protects and extends the life of connected loads.

Wide range of communication protocols

- Enable factory and process automation with connectivity to process and equipment data via Modbus® RTU, Modbus® TCP, Profibus, Profinet (available with external master communication module).

Open heater and shorted SCR indication


- Minimizes production downtime with easy to understand, intelligent, troubleshooting diagnostics.

Integrated USB and user interface for configuration

- Easily and safely program configuration settings as the user interface can be powered through USB connection
- Eliminates need to work in a high voltage hazard environment. High voltage to the power controller and system panel can be shut off and locked out for safety while configuring controller.

2

Software Configurator

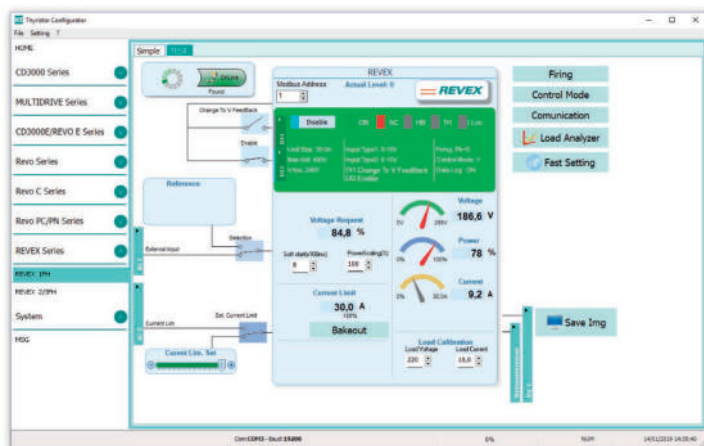

Thyristor configurator software is free and is possible download it from our site.

If the Order Code is in line with requirement, then unit has been already configured in Factory and it's ready to use.


You need the software only to modify the ordered configuration. Anyway we suggest to check the unit on the machine with the "Test unit" section.

For install the software, launch the program and follow the instructions on the screen.

Run the software configurator and set the correct serial port number by menu setting-serial com – port number.

Software Configurator download link:

https://www.cdautomation.com/wp-content/uploads/ThyristorConfigurator_ver6.zip

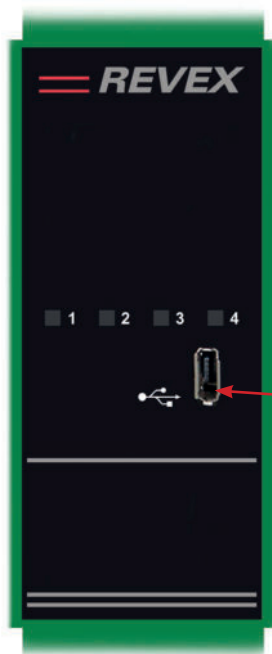

without display

Option code:
2/3/4/D
on digit 12



with display

Option code:
0/6/7/9
on digit 12

To connect the unit at the PC, it's necessary to use the micro USB 2.0 Modbus RTU cable. USB connection need a driver to work properly, you can find it from our site.

However the configuration software installer will install as default the correct driver.

Micro USB

3

Quick Start



Attention: this procedure must be carried out by skilled people only.

If your REVEX code is in line with what you really need, then the main configuration is already done by Producer and you just need to do the following steps:

1. Verify REVEX current sizing. Be sure that:
 - the load current is equal or less than the nominal one of REVEX
 - the main voltage is equal or less than the nominal voltage of REVEX
2. Verify the Installation
3. Verify the Wiring:
 - all auxiliary connections must be done in line with wirings on this manual
 - verify that there isn't a short circuit on the load
4. Supply the Unit
5. Set the parameters **Operative Load Voltage** and **Nominal Current of the load** by:
 - a. **REVEX Display version** (Option code 0/6/7/9 on Digit 12)
using the frontal keypad --> Operator menu or Thyristor configurator software
 - b. **REVEX NO Display version** (Option code 2/3/4/D on Digit 12)
using Thyristor configurator software

The Unit is ready to work

The auxiliary voltage supply of the REVEX unit must be synchronized with load voltage power supply.

If the Auxiliary Voltage (written on the identification label) is different from Supply Voltage (to the load), use an external transformer.

IMPORTANT

Starting Strategy (Enable):

- 1: Feed the unit with L1-L2/N power voltage supply**
- 2: Feed the auxiliary supply**
- 3: Close the Enable contact to start with the regulation**

If your REVEX code is NOT in line with what you really need, use the configurator software tool to set-up the unit. Install the software on your PC, select REVEX and click on test unit changing what you need.

4

Basic Connections and sizing


Single phase wiring with resistive load

$$I = \frac{P}{V}$$

V = Nominal voltage of the load

I = Nominal current of the load

P = Nominal power of the load

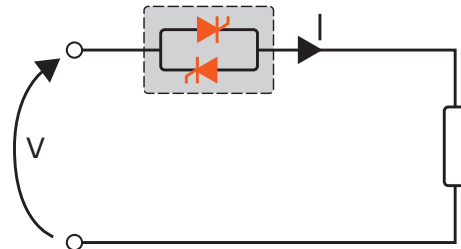


Single phase wiring with inductive load

$$I = \frac{P}{V \cos \varphi}$$

V = Nominal voltage phase to phase

I = Nominal current to the load

P = Nominal power to the load

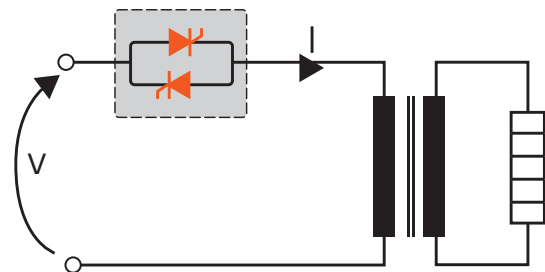


Open Delta wiring with resistive load

$$I = \frac{P}{3V}$$

V = Nominal voltage of the load

I = Nominal current of the load

P = Nominal power of the load

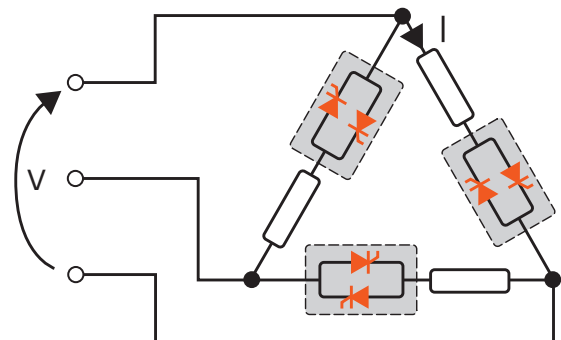

5

Identification and Order Code


5.1 Identification of the unit



Caution: Before to install, make sure that the Thyristor unit have not damages. If the product has a fault, please contact the dealer from which you purchased the product.

The identification label give all the information regarding the factory settings of the Thyristor unit, this label is on the unit, like represented in figure.

Verify that the product is the same thing as ordered.

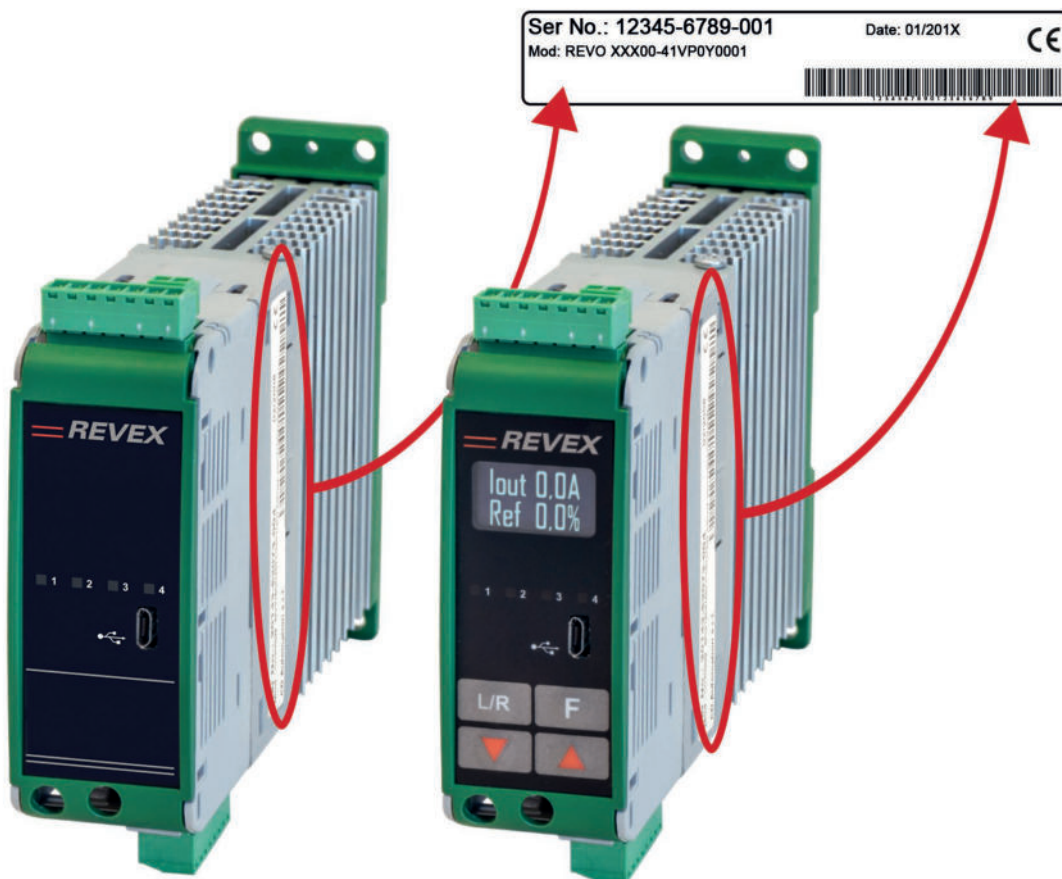

without display

Option code:
2/3/4/D
on digit 12

with display

Option code:
0/6/7/9
on digit 12

5.2 Order Code

	1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	16
REVEX 1PH	R	X	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-
CURRENT	FUSES			4	5	6		CONTROL MODE					11				
description	description			code		note		description					code	note			
30A	External Fuse (not included*)			0	3	0		Open Loop					0				
35A	External Fuse (not included*)			0	3	5		Voltage					U				
40A	External Fuse (not included*)			0	4	0		Voltage Square					Q				
												Current	I				
												Current Square	A				
												Power Vxl	W				
												External feedback	X				
MAX VOLTAGE				7				OPTION					12				
description				code	note			description					code	note			
480V				4				Option code see below table					...				
600V				6													
MAIN SUPPLY VOLTAGE				8				FAN VOLTAGE					13				
description				code	note			description					code	note			
24Vdc				4				No Fan < 90A					0				
MAIN INPUT				9				APPROVALS					14				
description				code	note			description					code	note			
SSR				S				CE EMC For European Market					0				
0:20mA				B													
4:20mA				A													
0:10V				V													
10KPot				K													
FIRING	START OPTION			10				LOAD TYPE					15				
description	description			code	note			description					code	note			
Single Cycle	No Soft Start			C				1 PH Normal Resistance					0				
	Linear Soft Starter			S				1 PH IRSW Infrared Short Wave					1				
Half Cycle	No Soft Start			H				1 PH MoSi2 Heaters					2	2			
	Linear Soft Starter			L				1 PH SiC Heaters					3				
	Soft Start for short Infr. Lamp			I				1 PH Transformer Coupled with Normal Resistance					4	1			
Burst Firing	No Soft Start			B				1 PH Transformer Coupled with MoSi2 Heaters					5	1			
	Linear Soft Starter			J				1 PH Transformer Coupled with SiC Resistance					6	1			
Phase Angle	No Soft Start			P				1 PH Transformer Coupled with UV Lamp					7	1			
	Linear Soft Starter			E													
Delayed Triggering	No Soft Start			D				VERSION					16				
	Linear Soft Starter			T				description					code	note			
Zero Crossing	No Soft Start			Z				N°1 Modbus® RTU std.					0				
	Linear Soft Starter			R													

* See page 60 for fuse details

Note (1): This configuration is possible only with Delayed Triggering or Phase Angle Firing

Note (2): This configuration is possible only with Phase Angle Firing

5.2.1 Option Code for Digit 12

Current Limit	Heater Break	Display	Option Code
Y	Y	Y	0
Y	Y	N	2
Y	N	N	3
N	N	N	4
Y	N	Y	6
N	N	Y	7
N	Y	Y	9
N	Y	N	D

Y Present
N Not present

6

Technical Specifications

6.1 General features

Cover and Socket material:	PolymericV2
Mounting:	DIN bar (thickness type 1mm Max)
Utilization Category:	AC-51 AC-55b AC-56A
IP Code:	20
Method of Connecting:	Single Phase load
Auxiliary voltage, power supply Control Circuit:	24Vdc 500mA
Relay output for Heater Break Alarm (only with HB option)	0.5A a 24Vac/dc

6.2 Input features

Digital Input:	4 ÷ 30Vdc 5mA Max (ON ≥4Vdc OFF <1Vdc) 5Hz max
Volt Analogic input:	0 ÷ 10Vdc impedance 15 kΩ
Current Analogic input:	4 ÷ 20mA impedance 100 Ω
Potentiometer:	10 kΩ min.
Logic input SSR (Fast Enable):	4 ÷ 30Vdc 5mA Max (ON ≥4Vdc OFF <1Vdc) 3Hz Max duty cycle min. 100 ms

6.3 Output features (power device)

Nominal current in continuous service:	See order code
Max peak current (10ms)	540A for unit type 030 540A for unit type 035 700A for unit type 040
Nominal Voltage range Ue :	24÷600V
Repetitive peak reverse voltage Uimp :	1200V (480V) 1600V (600V)
Latching current:	250mA
Leakage current:	15mA eff
Frequency range:	47÷70Hz
Power loss (I=Inom):	38W for unit type 030 44W for unit type 035 50W for unit type 040
Isolation Voltage Ui :	2500Vac

6.4 Environmental installation conditions


Ambient temperature	0-40°C (32-104°F) at nominal current. Over 40°C-104°F use the derating curve (max 50°C).
Storage temperature	-25°C to 70°C -13°F to 158°F
Installation place	Don't install at direct sun light, where there are conductive dust, corrosive gas, vibration or water and also in salty environmental.
Altitude	Up to 1000 meter over sea level. For higher altitude reduce the nominal current of 2% for each 100m over 1000m
Humidity	From 5 to 95% without condense and ice
Pollution Level	Up to 2nd Level ref. IEC 60947-1 6.1.3.2

6.5 Derating Curve

The nominal current of the units in specification are referred to continuous service at 40°C ambient temperature. For higher temperature multiply the nominal current times derating coefficient K below represented:

I max = I nominal x K

Derating

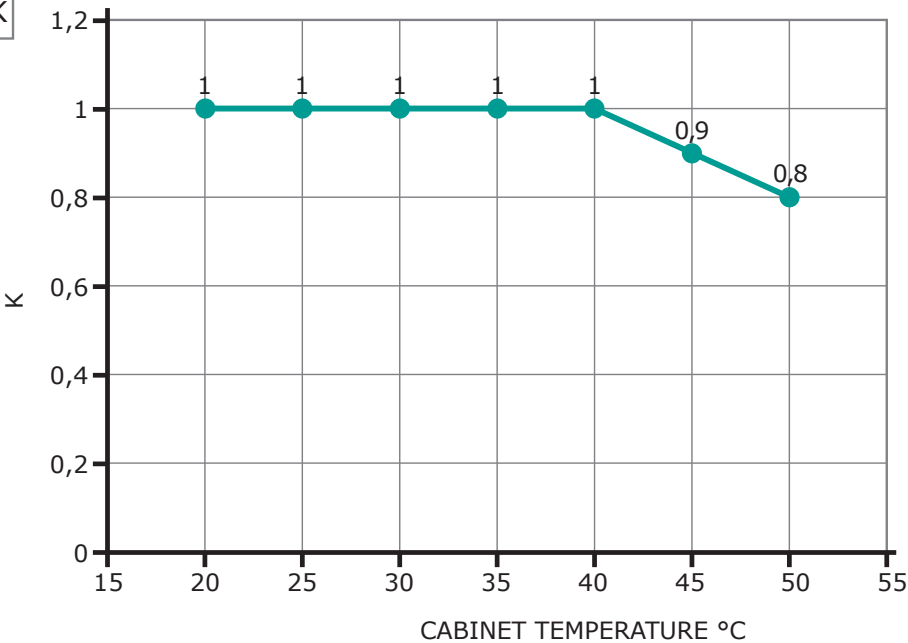

For higher cabinet temperature (more than 50°C) contact the producer of the unit

6.6 Calculating flow capacity of the fan

All the thyristor units when are in conduction produces power loss that is dissipated inside cubicle in terms of heating. Due to this fact the internal temperature of cubicle is higher than ambient temperature. To be cooled the thyristor need of fresh air cooling and to do it is normally used a fan mounted on the front door or on the roof of the cabinet.

Procedure to size **Fan air mass flow (V)**: see power loss for each thyristor and fuse mounted indicated in the manual related to the current (Output feature and Internal fuse Chapter).

$V=f * \frac{Q_v}{t_c-t_a}$	<p>Qv = total power losses (w) (thyristor + fuse power loss)</p> <p>ta = ambient temperature (°C)</p> <p>tc = cabinet temperature (°C)</p> <p>V = fan air mass flow (m3/h)</p> <p>f = altitude coefficient (see table on right)</p>	<p>Altitude</p> <table><tr><td>0:100</td><td>meters f = 3.1 m3k/W/h</td></tr><tr><td>100:250</td><td>meters f = 3.2 m3k/W/h</td></tr><tr><td>250:500</td><td>meters f = 3.3 m3k/W/h</td></tr><tr><td>500:750</td><td>meters f = 3.4 m3k/W/h</td></tr></table>	0:100	meters f = 3.1 m3k/W/h	100:250	meters f = 3.2 m3k/W/h	250:500	meters f = 3.3 m3k/W/h	500:750	meters f = 3.4 m3k/W/h
0:100	meters f = 3.1 m3k/W/h									
100:250	meters f = 3.2 m3k/W/h									
250:500	meters f = 3.3 m3k/W/h									
500:750	meters f = 3.4 m3k/W/h									



The formulas used are for information only and is not a substitute for a proper thermal rating done by a qualified person.

7

Installation

Before to install, make sure that the Thyristor unit have not damages.


If the product has a fault, please contact the dealer from which you purchased the product. Verify that the product is the same thing as ordered.

The Thyristor unit must be always mounted in vertical position to improve air cooling on heat-sink.

Maintain the minimum distances (*) in vertical and in horizontal as represented, this area must be free from obstacle (wire, copper bar, plastic channel).

When more unit has mounted inside the cabinet maintain the air circulation like represented in figure without obstacle for the air flow.


Is necessary to install a fan to have better air circulation as calculated previously.

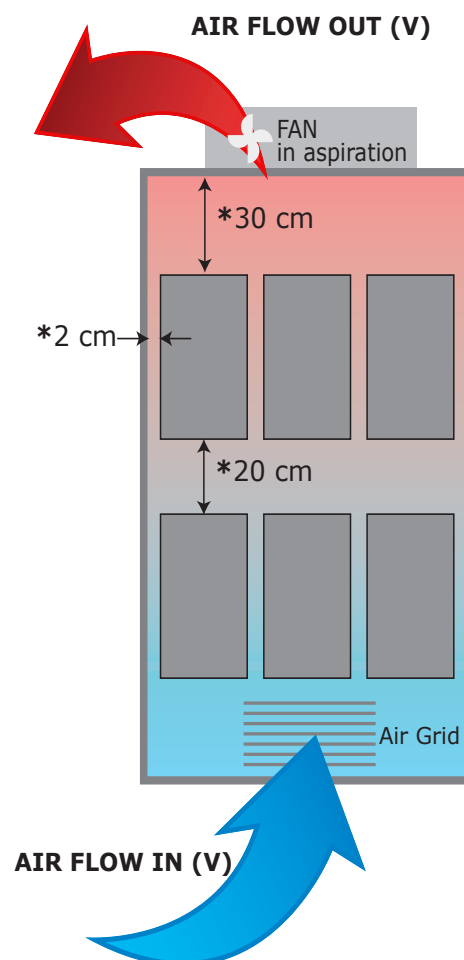

The V Air flow must be equal or more than the value calculated.


If the cabinet fan mounted by the customer have an air flow lower than the correct value the warranty will decay.

7.1 Dimensions and weight

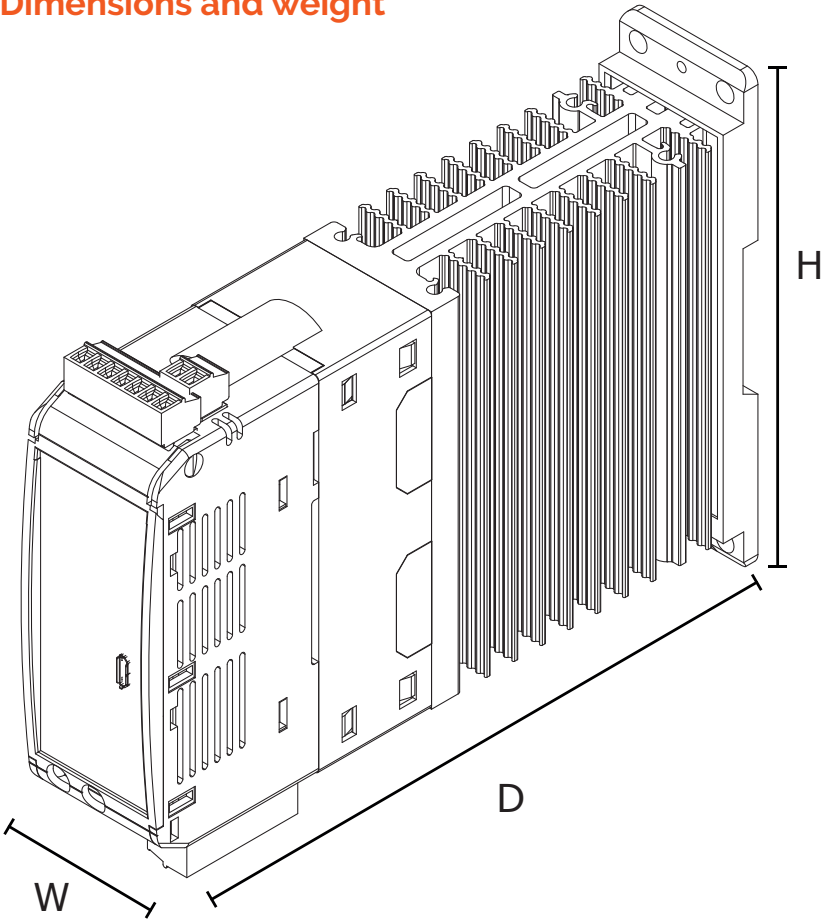

Size:	SR6 (1PH)
W (mm):	36
H (mm):	121
D (mm):	185
Weight (kg):	0,61

7.2 Fixing holes

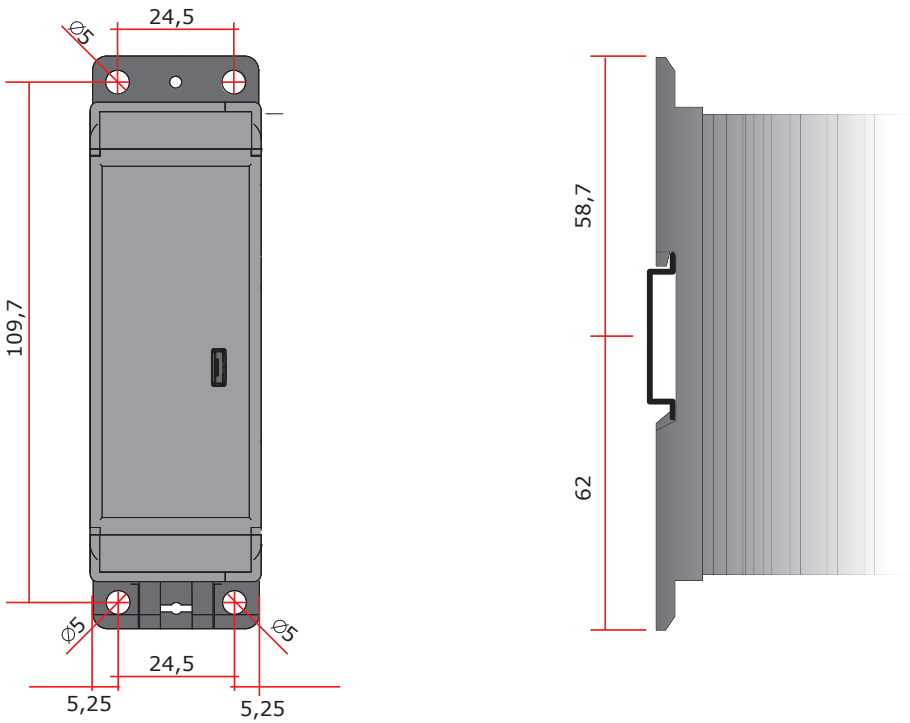

8

Wiring instructions

The Thyristor unit could be susceptible to interferences lost by near equipments or by the power supply, for this reason in accord to the fundamental practices rules is opportune take some precautions:

- The coil contactor, the relays and other inductive loads must be equipped with opportune RC filter.
- Use shielded bipolar cables for all the input and output signals.
- The signal cables must not be near and parallel to the power cables.
- Local regulations regarding electrical installation should be rigidly observed.

Use 90°C copper (CU) conductor only, wire ranges (AWG), wire terminal type (ZMVV), terminal tightening torque in the table below.

Power cable torque (suggested)

Type	Connector Type	Torque Lb-in (N-m)	Wire Range mm ² (AWG)	MAX Current Terminals	Wire Terminals UL Listed (ZMVV)
030 035 040	Screw M5	26.6 (3.0)	1.5-10 (16-8)	40A	Rigid / Flexible Spade Terminal

Cable dimensions of the Command Terminals	0.5 mm ² (AWG 18)
Cable dimensions of the Earth (suggested)	6 mm ² (AWG 10)



Warning: Before connecting or disconnecting the unit check that power and control cables are isolated from voltage sources.

Terminal	Description
L1	Line Input Phase 1
T1	Load Output Phase 1

8.1 Command Terminals



Warning: Before connecting or disconnecting the unit check that power and control cables are isolated from voltage sources.

8.1.1 Terminal block M1

Terminal	Description
Sync.	Zero crossing synchronization
Sync.	

Note: both terminals are connected internally and may be possible to use any one of them.

8.1.2 Terminal block M2

Terminal	Description
8	GND
9	COM I - Common Digital Input
10	DI 2 - Enable Digital Input
11	DI 1 - Configurable Input
12	+ Analog Input 1 (0-10Vdc/4-20mA Analog Setpoint)
13	- for Analog Input 1 and Analog input 2 - 0 Volt
14	Output +10Vdc stabilized 1 mA MAX
15	+ Analog Input 2 (0-10Vdc/4-20mA Analog Setpoint)

8.1.3 Terminal block M3

Terminal	Description
1	Auxiliary - 24Vdc 500mA Input power supply for communication
2	Auxiliary + 24Vdc 500mA Input power supply for communication
3	RS485 A+
4	RS485 B-
5	C - Common contact alarm relay output
6	NO - Normally Open contact alarm relay output (SC/HB)
7	NC - Normally Close contact alarm relay output (SC/HB)

8.2 Schematic




Indicative connection diagrams.
Refer to local regulations for
proper system protection.



Warning: It is not possible to remove the M3 connector when the unit is powered. Remove the AUX 24Vdc power supply before extracting the M3 connector.


Extracting the M3 connector with the AUX 24Vdc power supply connected to the M3 terminal could damage the unit

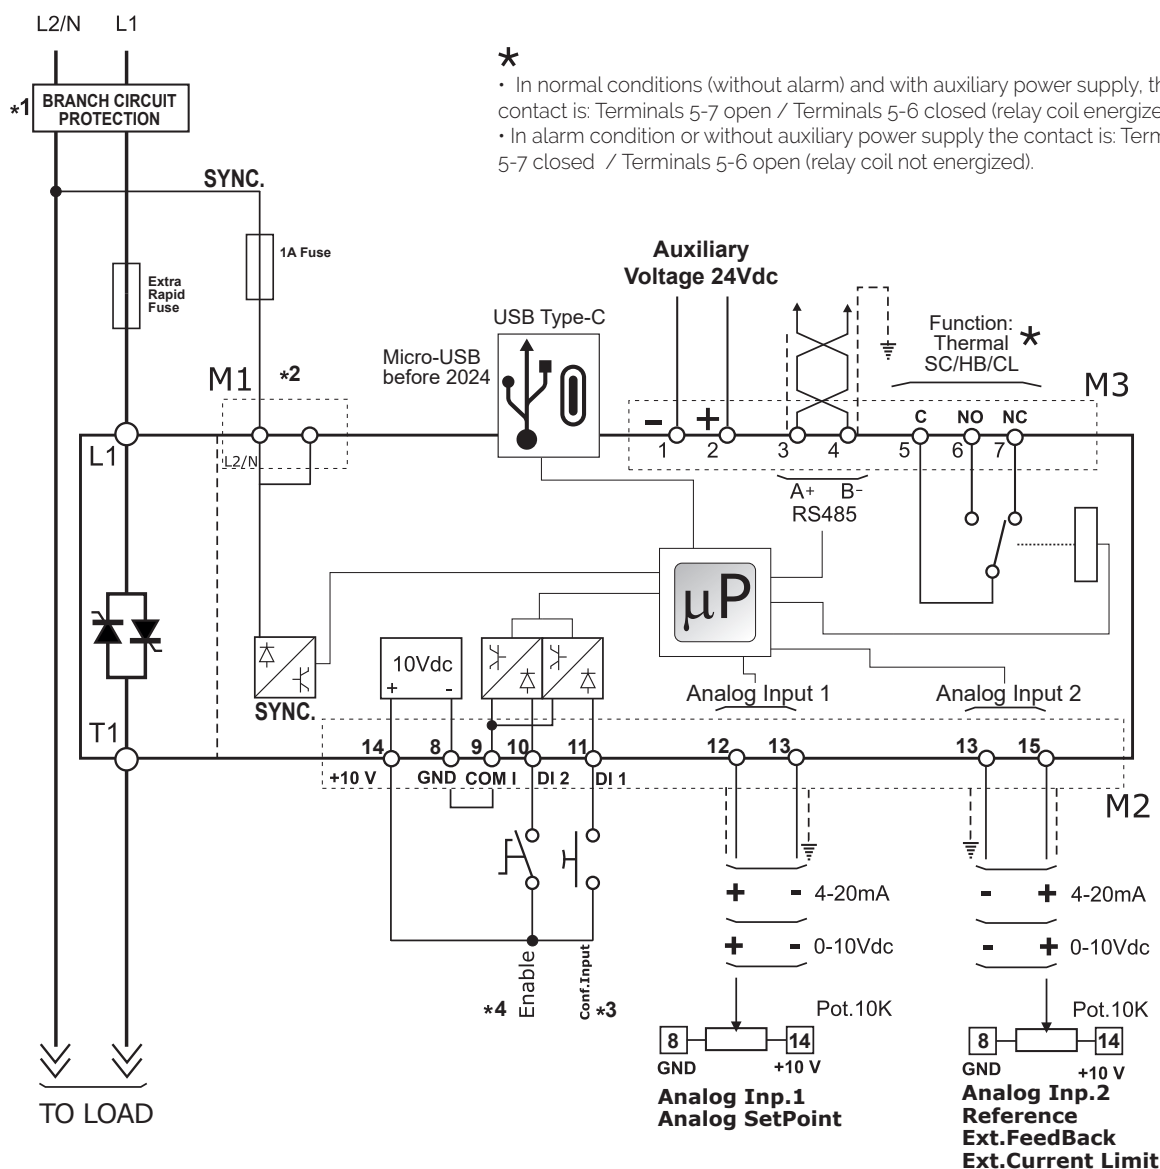


NOTE:

- *1 The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator.
The Fuse must be branch circuit protection.
- *2 **Connect on the phase not controlled by the thyristor, L2/N on Schematic above.**
Both terminals are connected internally and may be possible to use any one of them.
- *3 For SSR input connection follow next page schematic.
- *4 **IMPORTANT! Starting Strategy (Enable):**
 - 1: Feed the unit with L1-L2/N power voltage supply
 - 2: Feed the auxiliary supply
 - 3: Close the Enable contact to start with the regulation

TOP VIEW

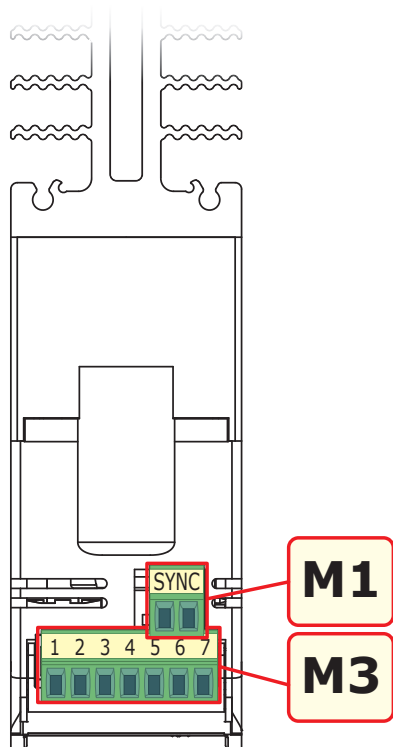


DOWN VIEW

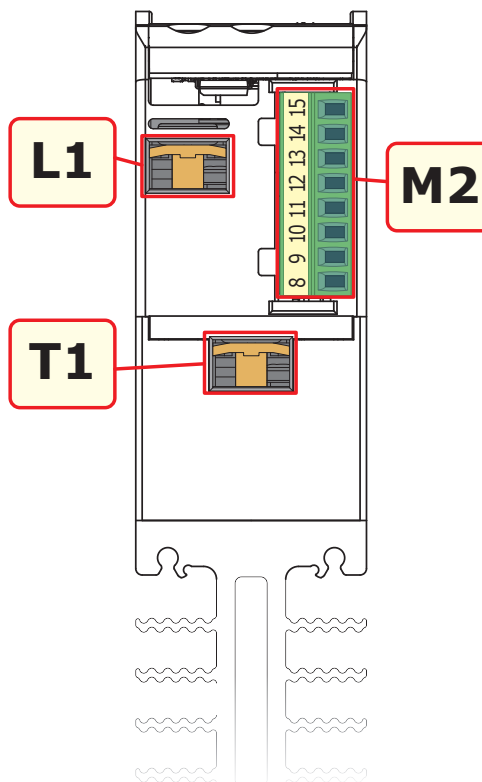


8.2.1 SSR Control Input schematic

For SSR input use follow the schematic below and configure Digital Input 1 as Fast Enable.

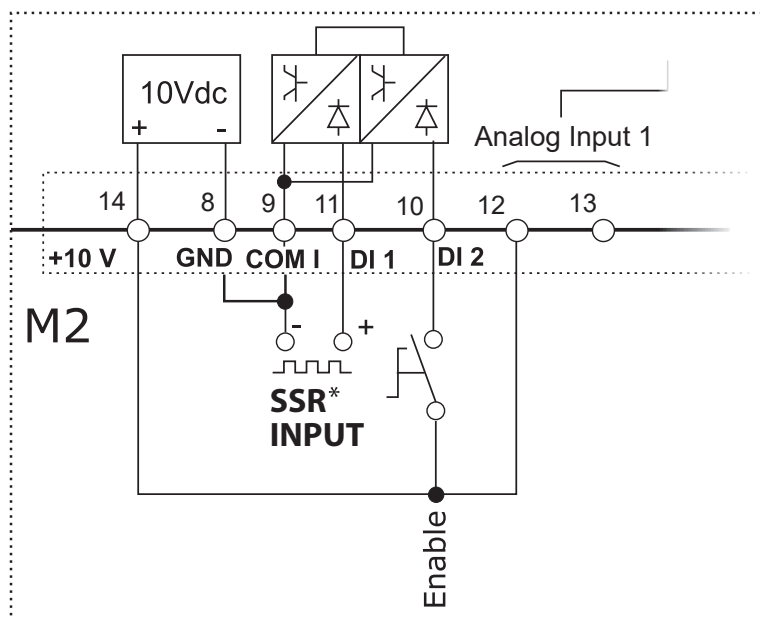

*** SSR Input:**
 $4 \div 30\text{Vdc}$ 5mA Max (ON $\geq 4\text{Vdc}$ OFF $< 1\text{Vdc}$)
 3HZ Max on time min. 100 ms

8.3 Connection Diagram

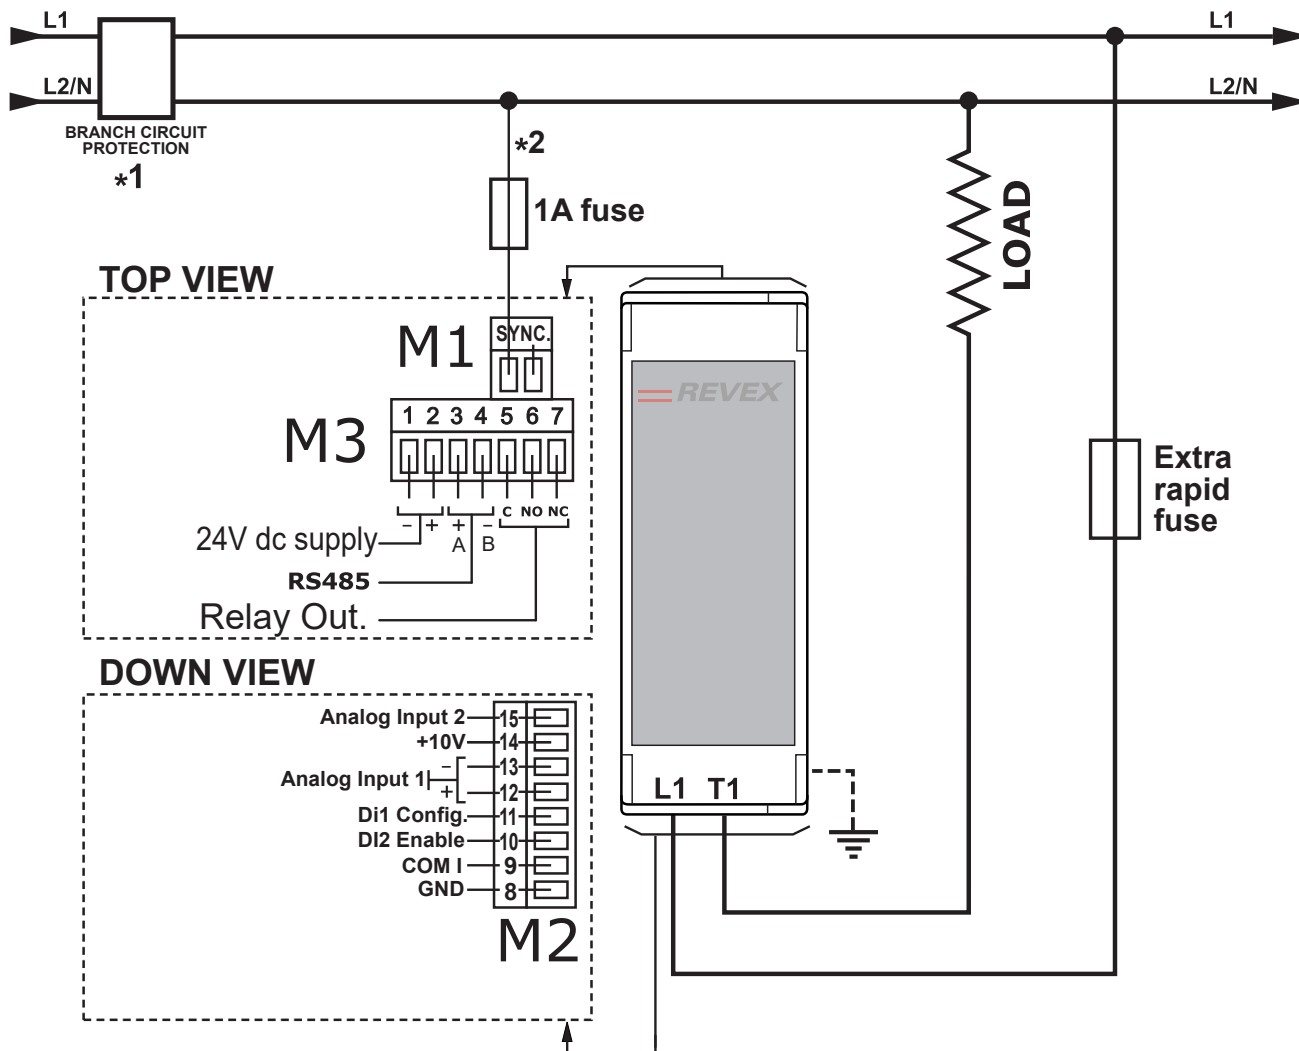

Warning: It is not possible to remove the M3 connector when the unit is powered. Remove the AUX 24Vdc power supply before extracting the M3 connector. Extracting the M3 connector with the AUX 24Vdc power supply connected to the M3 terminal could damage the unit

NOTE:

***1** The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator. The Fuse must be branch circuit protection.


***2** Connect on the phase not controlled by the thyristor, L2/N on Schematic above. Both terminals are connected internally and may be possible to use any one of them.

9

Control Panel

 **Control Panel Display and Keys are Not present for Option Codes: 2/3/4/D (see table pag. 15)**

The Control Panel is placed on the front of the thyristor unit, on his display you can visualize the alarms, the input and output signals and all the configuration parameters.

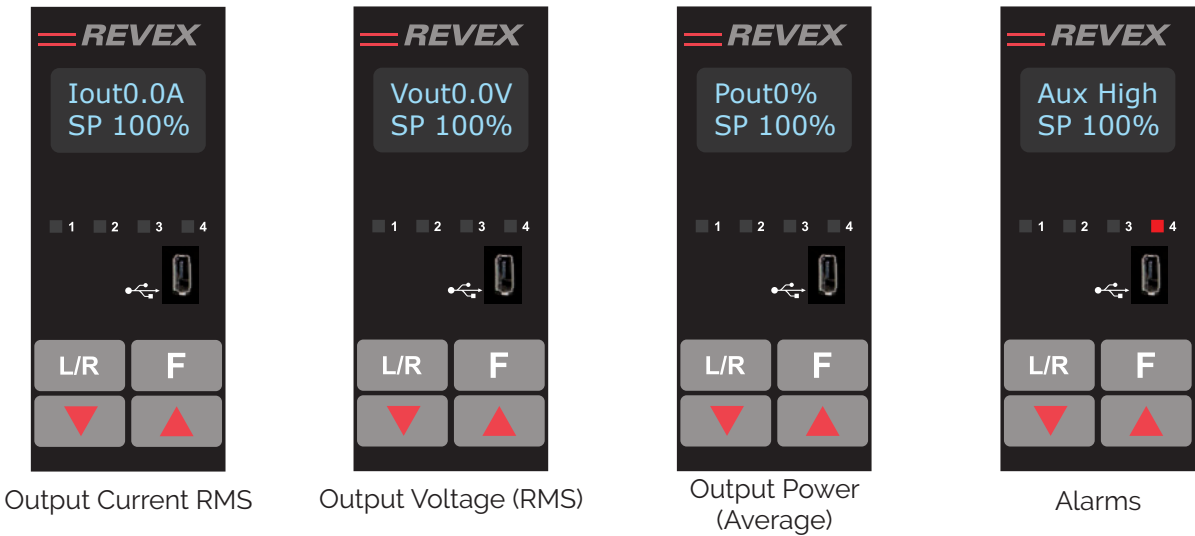

On the home page the keys are used as follows:

Press...		to...
	Function	Scroll through the parameters on the home page
	Local/Remote	Switch between local and remote set point for power demand
	Up	Increment power demand set point when set to local
	Down	Decrement power demand set point when set to local
+	Press and hold for about two seconds to access the menus	

To view the status parameters:

- Press Function once to advance from one parameter to the next

To set the set point locally:


- Press Local/Remote (Note: indicator 1 flashes steadily when set point is set locally)
- Use Down and/or Up to set the local set point.

9.1 Menu navigation

The menus are accessible using the control panel keypad and display.



Control Panel Display and Keys are Not present for Option Codes: 2/3/4/D (see table pag. 15)

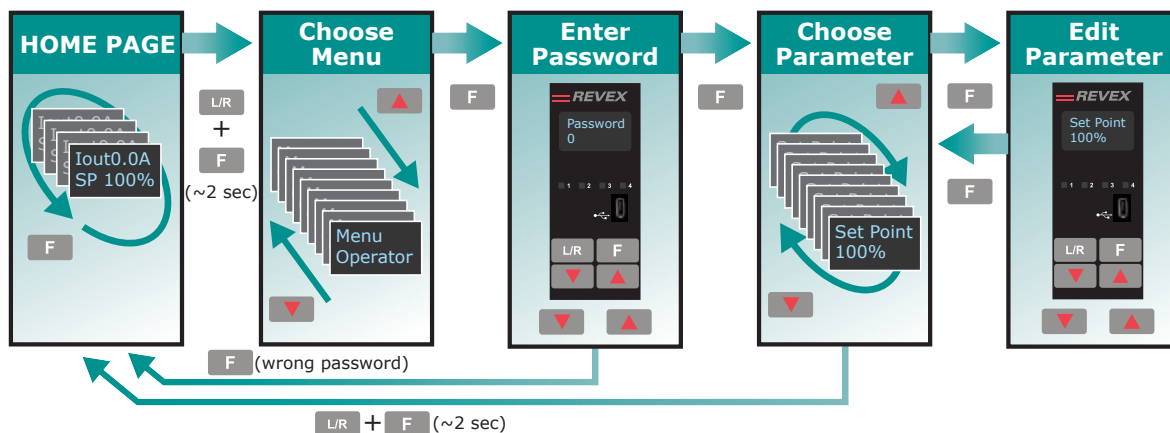


To access a menu and edit a setting:

1. Press and hold Local/Remote and Function together **L/R** + **F** until the upper display flashes Menu.
2. Press Up to choose the menu. (Press down if you overshoot the menu you want).
3. Press function **F** to advance to the password prompt.
4. Use up and/or down to set the password (see the table).
5. Press function **F** to enter the password and advance to the first parameter of the menu.
6. Press Up to advance to the next parameter and repeat to reach the desired parameter.
7. Press function **F** to start editing the parameter. The parameter name flashes in the upper display.
8. Use Up and/or down to edit the parameter setting.
9. Press function **F** to enter the new setting. The parameter name stops flashing.
10. Press and hold local/remote and function together **L/R** + **F** for about two seconds to exit the menus.

Menu	Password	Parameter used to...
Operator	0	View measured values and basic settings including current, voltage and set point
Setup	2	Configure the power controller for the load
Adv Setup	10	Configure the operation and performance of the power controller in the application
Hardware	5	Configure the functions of the analog and digital inputs and outputs, and the re-transmission parameters
Comm	3	Configure field bus communicating parameters
Monitoring	0	View measured and calculated values and other read-only parameters

9.2 Led indicators

The four indicators on the control panel show the general state of the power controller.

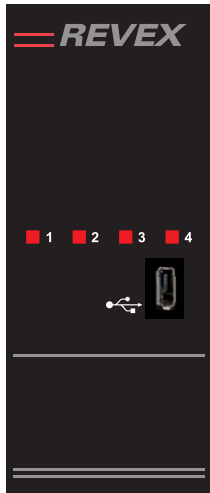

without display
Option code:
2/3/4/D
on digit 12



with display
Option code
0/6/7/9
on digit 12

1	Local/Remote	Flashing	Power output set locally or via communications
		Off	Power output set remotely (via analog input)
2	Enable	On	Output enabled
		Off	Output disabled
3	Communications	Flashing	Active communications
4	Alarm	Flashing	Active alarm*
		Off	No alarm

*In the version without display, Led 4 lit indicates that one of the alarms shown in the table below is active. Connect the configurator and check on the Test page which alarm is active.

9.3 Displayed alarms



Control Panel Display and Keys are Not present for Option Codes: 2/3/4/D (see table pag. 15)

Alarm or	Message	Description
HeatBrk		Heater Break <i>(if available)</i>
Aux High		Aux voltage too high
Aux Low		Aux voltage too low
	BakeOut	Heater Bakeout function active
ComError		Communication Watchdog error
Aux Line Loss		Auxiliary voltage (24V) not present
Line Loss		Line power not detected
I Limit		Output limited by current limit feature (only single phase) <i>(if available)</i>
SHRT		Short Circuit on SCR



If you have the version without display, all the functions shown on the display can be viewed via the configurator

9.4 Parameter list



Control Panel Display and Keys are Not present for Option Codes: 2/3/4/D (see table pag. 15)

This chapter describes the parameter on the menus accessed via the control panel and Configurator software. To learn how to access the menus described below see "Menu navigation" chapter.

Menu Listing

The table below lists the parameters found on each menu. See the following pages for descriptions and other details of each parameter.

Operator	Setup	Advanced Setup	Hardware	Communication	Monitoring
Set Point	Out Scale	Firing Type	Analog in 1	Port 1 Baud	Dig in 1
Volts Out	I Limit SP	Min Cycle	Analog in 2	Port 1 Addr	Dig in 2
Current	Nom Line V	Soft Start	An2 Funct	Watchdog	Enable
Power	Nominal I	Start Ramp	D11 Functn	WD Reset	SP Source
Volts In	Soft Start	Delay	DI2 Functn		Analog In1
Frequency	SP Select	Cycle Time	Alm Out Fn		Analog In2
Pwr Factor		Feedback	IL SP Src		SW Ver
Load Ω		Pb Power	Start Disp		SW Rel
I Limit SP		Ti Power			Unit Type
Out Scale		Pb Current			Max Voltage
Nom Line V		Ti Current			Max Current
Nominal I		HB Sense			Aux Voltage
		HB Delay			Serial No.
		Htr Bake			

☒ Read/write
 ☐ Read only

9.4.1 Operator Menu


This section describes each item on the operator menu. Use this menu to view the measured values and basic settings of the power controller. **The password to access this menu is 0.**

Parameter Name	Description	Range	Unit	Modbus Address	Par. Type
Set Point	View the set point	0 to 100	%	15	Read Only
Volts Out	Indicates the average (RMS) voltage of all phases	0 to 1023	V	10	Read Only
Current	Indicates the average (RMS) current of all phases	0 to 1023	V	11	Read Only
Power	Indicates the average (RMS) power output	0 to 100	%	12	Read Only
Volts In	Indicates the average (RMS) voltage input	0 to 65535	V	47	Read Only
Frequency	Indicates frequency of the power input	0 to 655.35	Hz	9	Read Only
Pwr Factor	Indicates power factor of the output power	0 to 1000		102	Read Only
Load Ω	Indicates the resistance of the load	0 to 655.35	Ω	46	Read Only
I Limit SP	Indicates the maximum percent of the nominal current that the power control allows. This parameter indicates RMS current by default. When parameter 52 is set to 1, this parameter indicates peak current	0 to 100	%	17	Read Only
Out Scale	Indicates the percentage by which the power demand set point is scaled	0 to 100.0	%	16	Read Only
Nom Line V	Indicates the user-set, nominal value for the line voltage input	0 to 1023	V	37	Read Only
Nominal I	Indicates the user-set, nominal load current	0 to 999.9	A	38	Read Only

9.4.2 Setup Menu

This section describes each item on the setup menu. Use this menu to configure the power controller for the load. **The password to access this menu is 2.**

Parameter Name	Description	Range	Unit	Modbus Address	Par. Type
Out Scale	Set the percentage by which the set point is scaled. For example, if a 0 to 10V analog input providing the set point is 5V and output scaling is 80% then the effective set point is 40%	0 to 100.0	%	16	Read Write

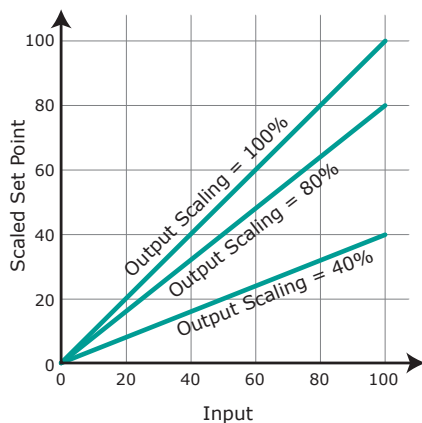

Parameter Name	Description	Default	Range	Unit	Modbus Address	Par. Type
I Limit SP	Set the maximum percent of the nominal current that the power control allows. This parameter indicates RMS current by default. When parameter 52 is set to 1, this parameter indicates peak current	100%	0 to 100.0	%	17	Read Write
Nom Line V	Set the nominal value for the line voltage input	220V	0 to 1023	V	37	Read Write
Nominal I	Set the nominal load current	Maximum current	0 to 999.9	A	38	Read Write
Soft Start	Set the duration of the soft start in increment of 100mSec. The power controller ramps set to point changes over the time set here. For more information see "Firing type" page: Soft Start with Burst Firing and Soft Start with Phase Angle	100 (10 sec)	0 to 255 (0 to 25.5 sec)		23	Read Write
SP select	Choose the source for the remote set point	0			61	Read Write

Option	Value
Analog In 1	0
Analog In 2	1

9.4.3 Advanced Setup Menu

This section describes each item on the advanced setup menu. Use this menu to configure the power switching, closed loop control of power and adjustable settings for data logging and heater bakeout. **The password to access this menu is 10.**

Parameter Name	Description	Default	Modbus Address	Par. Type
Firing Type	Choose the firing mode	3	18	Read Write

Option	Value
Zero Cross	1
Single Cyc	2
Burst fire	3
Ph Angle	4
Burst StrtR	19
PA SoftS	20
Delay Trig	35
Half Cycle	10
DEFAULT: Burst Fire	3

Parameter Name	Description	Default	Range	Unit	Modbus Address	Par. Type
Min Cycles	Set the minimum number of On cycles and off cycles for burst firing	8	0 to 999.9	n°	20	Read Write
Soft Start	Set the duration of the soft start in increment of 100mSec. The power controller ramps set to point changes over the time set here. For more information see "Firing type" page: Soft Start with Burst Firing and Soft Start with Phase Angle	100 (10 sec)	0 to 255 (0 to 25.5 sec)		23	Read Write
Start Ramp	Set the number of half cycles over which the power ramps each time the output turns on	0	0 to 1024	n°	25	Read Write
Delay	Set the firing delay degrees. Applies to burst firing with delay trigger	1	1 to 255	°	22	Read Write
Cycle time	Set the duration of one on-off cycle in increments of 50mSec. Applies to zero crossing	60 (3 sec)	0 to 255 (0 to 12.75 sec)		24	Read Write

Parameter Name	Description	Default	Range	Unit	Modbus Address	Par. Type
Feedback	Choose the feed-back type	1			19	Read Write

Option	Description	Value
V²	Voltage squared	0
None	No feed-back	1
I²	Current squared	2
Voltage	Voltage	32
Current	Current	64
Power	Power	128
External	External signal via analog input 2	256
DEFAULT: None		1

Parameter Name	Description	Default	Range	Unit	Modbus Address	Par. Type
Pb Power	Set the gain for the main loop. A larger value yields a larger adjustment for a given deviation	10%	0 to 255	%	26	Read Write
Ti Power	Set how aggressively the integral part of the control algorithm acts. A larger settings yields a larger adjustment for a given deviation over a given time	50	0 to 255		27	Read Write
Pb Current	Set the gain for the current loop. A larger value yields a larger adjustment for a given deviation	10%	0 to 255	%	63	Read Write
Ti Current	Set how aggressively the integral acts in the current loop. A larger settings yields a larger adjustment for a given deviation over a given time	50	0 to 255		64	Read Write
HB Sense	Set the threshold of resistance that activates the Heater Break alarm. This setting is in percentage of the nominal load resistance	100%	0 to 100.0	%	29	Read Write

Parameter Name	Description	Default	Range	Unit	Modbus Address	Par. Type
HB Delay	Set a delay between when the resistance drops below the value set for a heater break sensitivity and when the heater break alarm is indicated. This set increments of 50mSec	50 (2,5 sec)	0 to 255 (0 to 12,75 sec)		28	Read Write
Htr Bake	Enable or disable the heater bakeout feature	0			140	Read Write

Option	Value
Off	0
On	1
DEFAULT: Off	0

9.4.4 Hardware Menu

This section describes each item on the hardware menu. Use this menu to configure how the inputs and outputs are used in the application. **The password to access this menu is 5.**

Parameter Name	Description	Default	Modbus Address	Par. Type
Analog In 1	Choose the type of signal to be measured by analog input 1	1	44	Read Write

Option	Description	Value
0-10V	0 to 10 Vdc or 10,000Ω	1
4-20mA	4 to 20 mAdc	2
0-20mA	0 to 20 mAdc	3
DEFAULT: 0-10V		1

Parameter Name	Description	Default	Modbus Address	Par. Type
Analog In 2	Choose the type of signal to be measured by analog input 2	1	105	Read Write

Option	Description	Value
0-10V	0 to 10 Vdc or 10,000Ω	1
4-20mA	4 to 20 mAdc	2
0-20mA	0 to 20 mAdc	3
DEFAULT: 0-10V		1

Parameter Name	Description	Default	Modbus Address	Par. Type
An2 Funct	Choose how the signal measured by analog input 2 is used	0	116	Read Write

Option	Description	Value
I Limit SP	Current Limit Set point	0
Feedback	External feed-back	1
Set Point	Power Demand set point	2
DEFAULT 1Phase: I Limit		0

Parameter Name	Description	Default	Modbus Address	Par. Type
D11 Functn	Choose how the signal detected by digital input 1 is used	2	32	Read Write

Option	Description	Value
Enable	Enable power output	0
V Feedback	Use voltage feed-back when on	2
Local / Rmt	Local when on / Remote when off	3
Ph Angle	Use phase angle firing when on	4
SP AI1/AI2	Select remote set point source: analog input 1 when off or analog input 2 when on	5
Htr Bake	Enable heater bakeout	7
FastEn	Fast Enable*	8
DEFAULT: Voltage Feed-back		2

* **SSR Input:** $4 \div 30\text{Vdc}$ 5mA Max (ON $\geq 4\text{Vdc}$ OFF $< 1\text{Vdc}$) 3HZ Max on time min. 100 ms
 When the Fast Enable input is enabled, Phase Angle firing is automatically selected.

Parameter Name	Description	Default	Modbus Address	Par. Type
D12 Functn	Choose how the signal detected by digital input 2 is used	0	33	Read Write

Option	Description	Value
Enable	Enable power output	0
V Feedback	Use voltage feed-back when on	2
Local / Rmt	Local when on / Remote when off	3
Ph Angle	Use phase angle firing when on	4
SP AI1/AI2	Select remote set point source: analog input 1 when off or analog input 2 when on	5
Htr Bake	Enable heater bakeout	7
FastEn	Fast Enable*	8
DEFAULT: Enable		0

* **SSR Input:** $4 \div 30\text{Vdc}$ 5mA Max (ON $\geq 4\text{Vdc}$ OFF $< 1\text{Vdc}$) 3HZ Max on time min. 100 ms
 When the Fast Enable input is enabled, Phase Angle firing is automatically selected.

Parameter Name	Description	Default	Modbus Address	Par. Type
Alm Out Fn	<p>Choose for which conditions the digital output indicates alarm. The output always indicate an alarm when the heat sink is over temperature. The digital output is energized for normal operating condition and de-energized when the power controller is off or when there is an alarm.</p> <p>Note!: The power controller monitors for heater break or short circuit condition only when included in the option selected for Alarm Output Function</p>	1	34	Read Write

Option	Description	Bit
Heater Break	Heater Break	0
Short Circuit	Short circuit	1
Current Limit	Current Limit	2
Therm	SCR is over temperature	3
Communication	Communication watchdog error	4
DEFAULT		None

Alarm Bitwise is allowed

Parameter Name	Description	Default	Modbus Address	Par. Type
IL SP Src	Choose how the current limit is set	16	14, bit 4	Read Write

Option	Description	Value
Local / Comms	Set point set via keypad or communication	16
Analog In 2	Set point set via analog input	0
DEFAULT: Local / Comms		16

Parameter Name	Description	Default	Modbus Address	Par. Type
Start Disp	Choose which parameter is displayed on the home page at power-up	1	60	Read Write

Option	Value
Current	0
Volts Out	1
Power	2
DEFAULT: Voltage	1

9.4.5 Communication Menu

This section describes each item on the communication menu. Use this menu to configure the communication options. **The password to access this menu is 3.**

Parameter Name	Description	Default	Modbus Address	Par. Type
Port 1 Baud	Choose the baud rate for the primary serial port	2	30	Read Write

Option	Value
9600	0
19.2K	1
38.4K	2
115.2K	3
DEFAULT: 38.4K	2

Parameter Name	Description	Default	Range	Modbus Address	Par. Type
Port 1 Addr	Set the address for the primary serial port	1	0 to 255	31	Read Write
Watchdog	Enable or disable the watchdog on the primary serial port	0		142	Read Write

Option	Value
Off	0
On	1
DEFAULT: Off	0

Parameter Name	Description	Default	Range	Unit	Modbus Address	Par. Type
WD Reset	Set the amount of time to wait for a message before triggering the watchdog error. This function is available only for Modbus RTU Protocol	5	0 to 255	Sec	143	Read Write

9.4.6 Monitoring Menu

This section describes each item on the monitoring menu. Use this menu to view the states of digital input, values of analog input and information about the power controller such as serial number and software version. **The password to access this menu is 0.**

Parameter Name	Description	Modbus Address	Par. Type
Dig In 1	Indicate the state of the signal to digital input 1	13 bit8	Read Only

Option	Value
Off	0
On	1

Parameter Name	Description	Modbus Address	Par. Type
Dig In 2	Indicate the state of the signal to digital input 2	13 bit9	Read Only

Option	Value
Off	0
On	1

Parameter Name	Description	Modbus Address	Par. Type
Enable	Indicate whether or not the power controller is enabled. The enable signal must be on for the unit to output power to the load	14 bit2	Read Only

Option	Value
Off	0
On	1

Parameter Name	Description	Modbus Address	Par. Type
SP Source	Indicate whether the power controller is local or remote set point mode	14 bit1	Read Only

Option	Description	Value
Local / Comms	Set Point via keypad or communication	2
Remote	Set Point via analog input	0

Parameter Name	Description	Range	Unit	Modbus Address	Par. Type
Analog In1	Indicates the percent of full scale measured by analog input 1	0 to 100.0	%	138	Read Only
Analog In2	Indicates the percent of full scale measured by analog input 2	0 to 100.0	%	137	Read Only
SW Ver	Indicates the software version number (x.xx.x)	0 to 65535		48	Read Only
SW Rel	Indicates the software release date year and week (yyww)	0 to 65535		49	Read Only
Unit Type	Indicates the type of power controller			36	Read Only

Option	Description	Value
RC 1	Single Phase	7
RC 2	Two Leg, three phase	8
RC 3	Three Leg, three phase	9
RC 3P	Three Leg, three phase with phase angle capability	9999

Parameter Name	Description	Range	Unit	Modbus Address	Par. Type
Max Voltage	Indicates the maximum voltage rating of the power controller	0 to 1023	V	41	Read Only
Max Current	Indicates the maximum current capacity of the power controller	0 to 9999	A	62	Read Only
Aux Voltage	Indicates the measured line voltage	0 to 1023	V	43	Read Only
Serial No	Indicates the serial number of the power controller	0 to 9999		149-150 151-152	Read Only

10

Using the Configurator

Configurator software can be used like an alternative of the power controller's keypad and set the advanced features not available via the power controller's onboard user interface. Here we explain how to use it.

10.1 Typical Uses

The software may be used during commissioning to:

- set internal parameter do determine how the power controller operates and performs;
- save and restore a setup, copy or clone one power controller to another;
- on a day-to-day basis to monitor operation and power usage;
- examine performance in more detail to determine if any corrective actions are needed.

10.2 Communicating with Power Controllers

When commissioning the power controller, may be useful to connect a computer via the USB port, located below the control panel's display, so it's possible to configure and examine the settings of the controller. The controller's electronics is powered vis USB cable, so it's to possible to inspect it before applying power.



NOTE! the power of the USB port is limited and not designed to power industrial cards, so it manages to feed only the essential parts of the electronics. For complete control, you need to power up the auxiliaries of the power controller.

10.3 Recipes

A recipe is a file that store the settings of power controller's internal parameter.

It is used to save a power controller configuration or to restore an existing configuration in a power controller.

10.3.1 Upload a recipe

A recipe is created using upload function in the Configurator software and saving it as a file on the computer.

10.3.2 Download a recipe

An existing recipe can be downloaded to a power controller using download function in Configurator software.

10.4 How To

Here the procedures for common tasks are described step-by-step.

10.4.1 Install and communication with the power controller


Procedure to install the Configurator:

- 1) Locate t the installer

direct link: https://www.cdautomation.com/wp-content/uploads/ThyristorConfigurator_ver6.zip

On our website: "Download" page -->
Software & Drivers
or
Product page --> SW/Comm tab

- 2) Double-click on the installer program to start installation.
- 3) Follow the on-screen instructions.


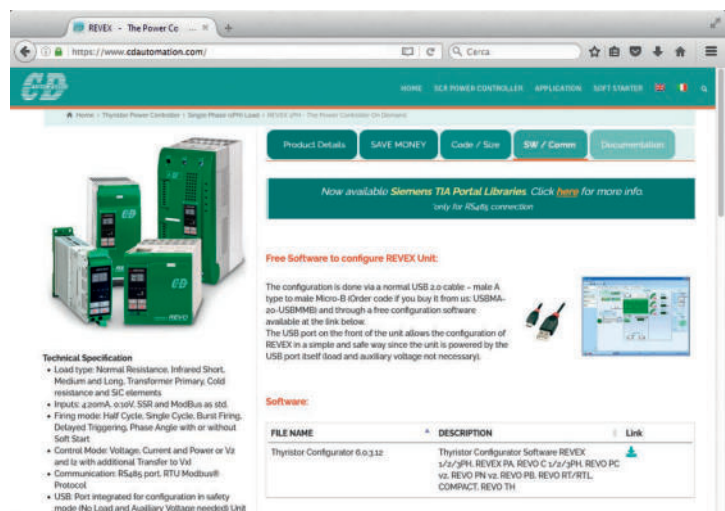


Procedure to communicate with a power controller:

- 1) **if used direct USB connection:**
 - Connect the USB cable between the computer and the micro USB connector on the power controller's keypad
 - if necessary, wait for the USB driver to install.
- 2) **if used RS-485 connection** connect the power controller terminal to computer RS485 port. Usually the standard pc do not have a RS485 port so a USB-to-485 converter is required.
- 3) Launch the Configurator software and select
 - **REVEX 1PH:** for single phase
 - **REVEX 2/3PH:** for 2 or 3 phase power controller
- 4) Choose **Serial Port** From **Setting -> Serial Port** menu
- 5) In value **Port**, select the COM port connected to the power controller (see the note below)
- 6) To verify communications, click **Test**
- 7) Click **OK**

NOTE! to determine which port is connected to the power controller, you can:

- in the Windows" Device Manager, under Ports (COM & LPT), looking for the COM port named "LPC USB VCOM Port (COMx)" where x is the port number
- On configurator software:
 - open the software without connect the unit and see the available COM port on COM port window setting,
 - close the COM setting window,
 - connect the USB cable to the power controller (wait for the USB driver to install if necessary),- open the COM setting window, see the added COM number and select it.

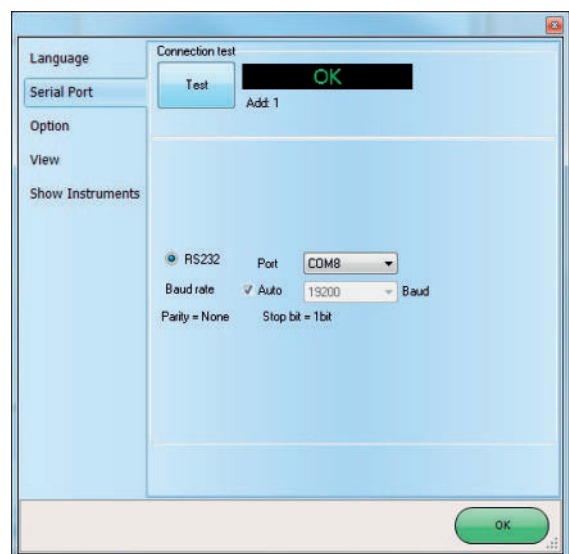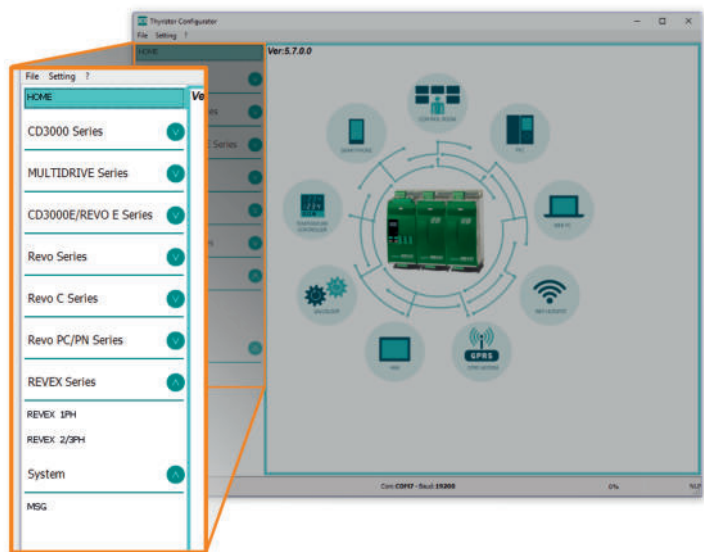

10.5 Using the Configurator

After the software has been installed, communication has been set up and model type selected, it is possible to operate with the power controller.

10.5.1 To view or save a power controller's settings using "Simple" view section:




- 1) Click **Simple**, if not already on the simple view
- 2) Click **Upload from unit**
- 3) Set the address, if necessary
- 4) Click **READ->**
- 5) Wait for the software to read the parameter settings
- 6) Click **OK**
- 7) If necessary save the settings in a recipe file:
 - Click **Save**
 - Name the recipe
 - Click **Save** button



NOTE! In the simple view the changes are not "live", so to take effect the change in simple section is necessary to download it following download procedure.


10.5.2 To edit a setting in a recipe:

- 1) Click **Simple**, if not already on the simple view
- 2) Click **Open** existing recipe
- 3) Locate and select the recipe file and click **Open**
- 4) Click **OK**
- 5) Click the menu with the setting you want to change
 - **SETUP**
 - **ADVANCED SETUP**
 - **HARDWARE**
 - **COMMUNICATIONS**
- 6) Select the value you want to change
- 7) Edit the value with the increment and decrement buttons in the field or type the new value and press the Enter key
- 8) Repeat steps 5 to 7 for all the changes you want to make
- 9) To save the settings in a recipe file:
 - Click **Save**
 - Name the recipe
 - Click **Save** button

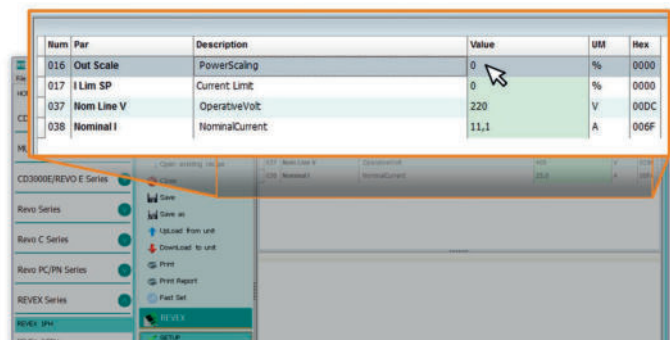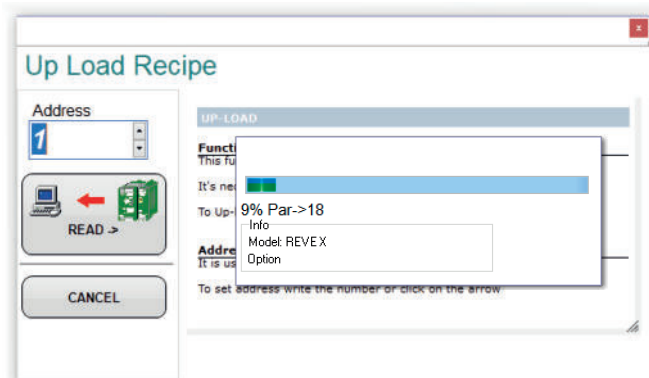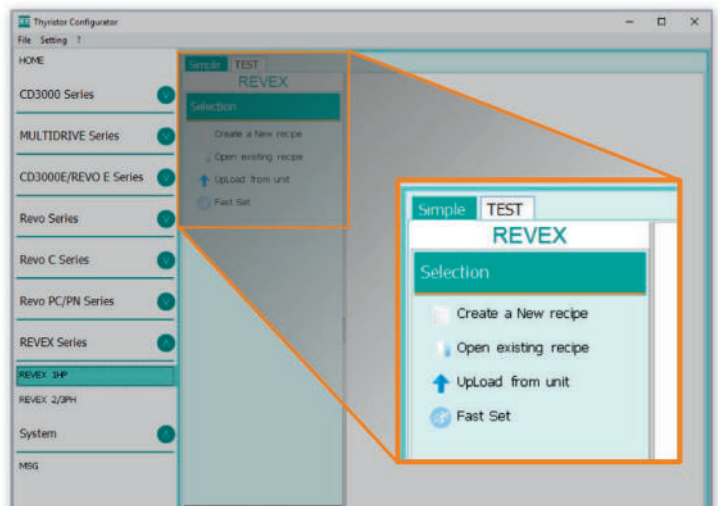


10.5.3 To download a recipe file into a power controller:

- 1) Click **Simple**, if not already on the Simple view
- 2) Click **Open** existing recipe
- 3) Locate and select the recipe file and click **Open**
- 4) Click **OK**
- 5) Click **Download to unit**
- 6) Set the address, if necessary
- 7) Click **SEND->**
- 8) Wait for the software to write the parameter settings
- 9) Click **OK**

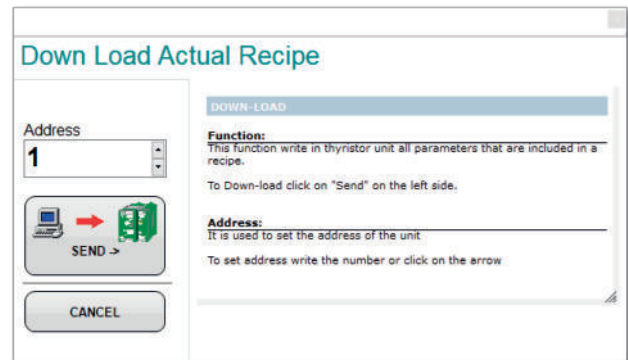

10.5.4 To monitor a power controller with the Test view:

- 1) Click **Test**, if not already on the test view
- 2) Click **Online**

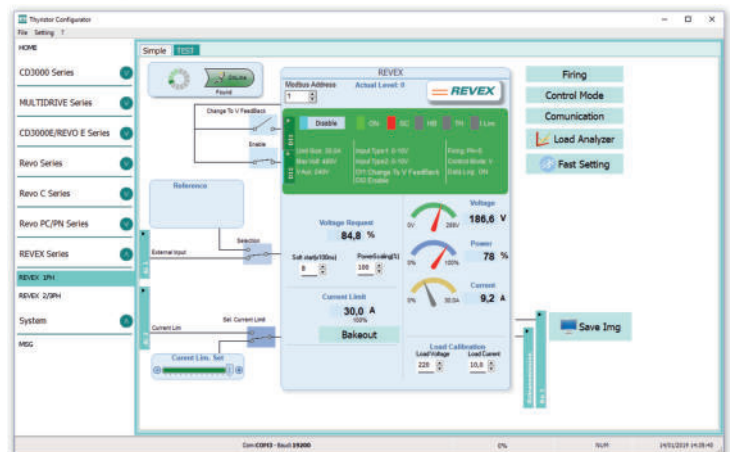


10.5.5 To log in on the test view to change the digital input and analog input functions:

- 1) Click the **Access Level** value (zero when logged out)
- 2) Type the password: **1111**
- 3) Click **OK**

10.5.6 To log out the test view:

- 1) Click the **Access Level** value.
- 2) Click **Log out**.
- 3) Click **OK**.

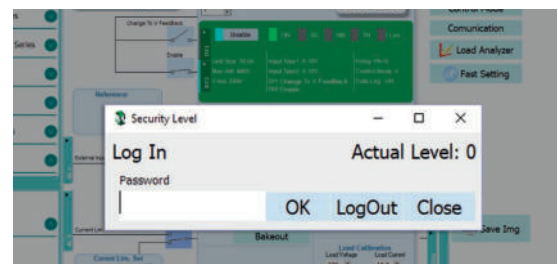

10.5.7 To view data on the scope:

- 1) Click **Test**, if not already on the test view
- 2) Click **Online**
- 3) Click **Load Analyzer**
- 4) For each of up to three channels (Ch 1 to Ch 3):
 - With **PV1** choose the value to monitor
 - Select **Show**
 - Click the color swatch to change the color
 - Click the button to turn the channel on.



10.6 Software General information

Here it is described the Configurator Software and how to use it.

10.6.1 Program Window

Main Menu

Access these menus.

File menu

Exit: close the program

Setting menu

Language: open Language Settings dialog box


Serial Port: open Serial Port dialog box

Option: open General Option dialog box

? (Help) menu

Message Log: open a serial communication message view

About: displays the About dialog with the program name and version and contact information

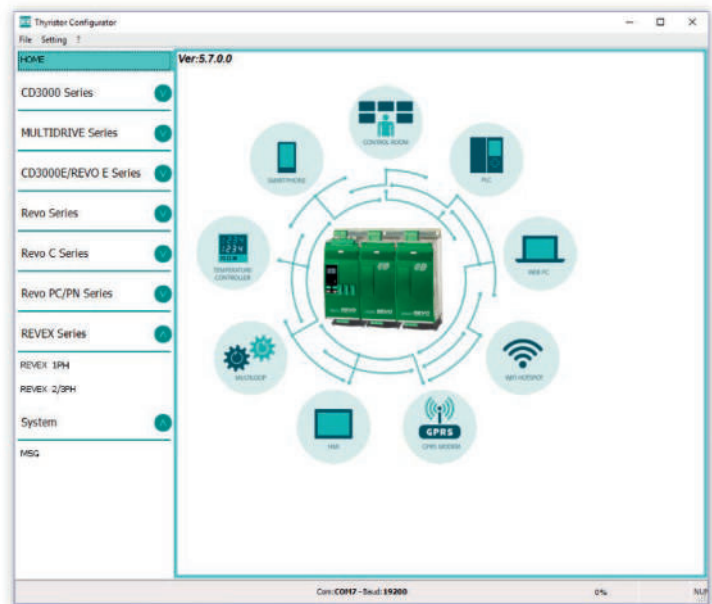

Instruments selector

Select the right instrument to use:

HOME: the default view

REVEX 1PH: open the Simple and Test views for a single-phase power controller

REVEX 2/3PH: access the Simple and Test views for a two-phase or three-phase power controller

MSG: opens a serial communication message view

Status Bar

Indicates information such as time and date, communications port and baud rate.

10.6.2 Simple Section

This section is used to create, save, upload and download recipes of parameters settings. Can be used also to see the settings in a controller.

Simple page is the default page when select the model using the Model Button, but if not selected is possible to access it by clicking the Simple tab below the main menu.



NOTE! This section is not "OnLine" so the parameter values are not updated continuously. They are read only when you upload them from the power controller.


To manage a recipe click on:

Create a New recipe: create a recipe file with the standard default settings

Open existing recipe: open an existing recipe file

Upload from unit: create a new recipe with the value uploaded from a connected power controller

Close: close the current recipe

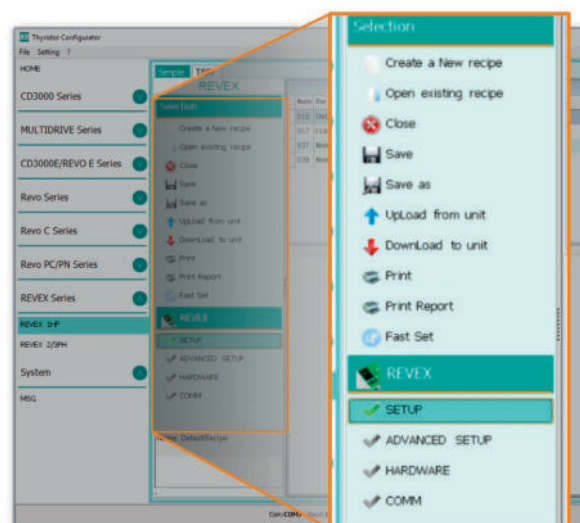

Save: save the recipe in a file

Save as: save a copy of the recipe in a file

Download to unit: send the current recipe parameters in the connected power controller

Print: print the recipe (see sample at right)

Print report: print the recipe (see sample at right)

REVEX

10/05

Defaulter

18/01/2016 14:31

SETUP			
Par.	Description	Unit	Value
P010	Out Scale	PowerScaling	0%
P017	I Lim SP	Current Limit	0%
P027	Nom Line V	Operative Volt	220V
P038	Nominal I	Nominal Current	11.1A
ADVANCED SETUP			
Par.	Description	Unit	Value
P101	Analogue	Pump	100% Speed
P102	Relay	Control Mode	1/2
P103	Relay	1st Relay	8
P104	Relay	2nd Relay	16
P105	Relay	3rd Relay	24
P106	Relay	4th Relay	32
P107	Relay	5th Relay	40
P108	Relay	6th Relay	48
P109	Relay	7th Relay	56
P110	Relay	8th Relay	64
P111	Relay	9th Relay	72
P112	Relay	10th Relay	80
P113	Relay	11th Relay	88
P114	Relay	12th Relay	96
P115	Relay	13th Relay	104
P116	Relay	14th Relay	112
P117	Relay	15th Relay	120
P118	Relay	16th Relay	128
P119	Relay	17th Relay	136
P120	Relay	18th Relay	144
P121	Relay	19th Relay	152
P122	Relay	20th Relay	160
P123	Relay	21st Relay	168
P124	Relay	22nd Relay	176
P125	Relay	23rd Relay	184
P126	Relay	24th Relay	192
P127	Relay	25th Relay	200
P128	Relay	26th Relay	208
P129	Relay	27th Relay	216
P130	Relay	28th Relay	224
P131	Relay	29th Relay	232
P132	Relay	30th Relay	240
P133	Relay	31st Relay	248
P134	Relay	32nd Relay	256
P135	Relay	33rd Relay	264
P136	Relay	34th Relay	272
P137	Relay	35th Relay	280
P138	Relay	36th Relay	288
P139	Relay	37th Relay	296
P140	Relay	38th Relay	304
P141	Relay	39th Relay	312
P142	Relay	40th Relay	320
P143	Relay	41st Relay	328
P144	Relay	42nd Relay	336
P145	Relay	43rd Relay	344
P146	Relay	44th Relay	352
P147	Relay	45th Relay	360
P148	Relay	46th Relay	368
P149	Relay	47th Relay	376
P150	Relay	48th Relay	384
P151	Relay	49th Relay	392
P152	Relay	50th Relay	400
P153	Relay	51st Relay	408
P154	Relay	52nd Relay	416
P155	Relay	53rd Relay	424
P156	Relay	54th Relay	432
P157	Relay	55th Relay	440
P158	Relay	56th Relay	448
P159	Relay	57th Relay	456
P160	Relay	58th Relay	464
P161	Relay	59th Relay	472
P162	Relay	60th Relay	480
P163	Relay	61st Relay	488
P164	Relay	62nd Relay	496
P165	Relay	63rd Relay	504
P166	Relay	64th Relay	512
P167	Relay	65th Relay	520
P168	Relay	66th Relay	528
P169	Relay	67th Relay	536
P170	Relay	68th Relay	544
P171	Relay	69th Relay	552
P172	Relay	70th Relay	560
P173	Relay	71st Relay	568
P174	Relay	72nd Relay	576
P175	Relay	73rd Relay	584
P176	Relay	74th Relay	592
P177	Relay	75th Relay	600
P178	Relay	76th Relay	608
P179	Relay	77th Relay	616
P180	Relay	78th Relay	624
P181	Relay	79th Relay	632
P182	Relay	80th Relay	640
P183	Relay	81st Relay	648
P184	Relay	82nd Relay	656
P185	Relay	83rd Relay	664
P186	Relay	84th Relay	672
P187	Relay	85th Relay	680
P188	Relay	86th Relay	688
P189	Relay	87th Relay	696
P190	Relay	88th Relay	704
P191	Relay	89th Relay	712
P192	Relay	90th Relay	720
P193	Relay	91st Relay	728
P194	Relay	92nd Relay	736
P195	Relay	93rd Relay	744
P196	Relay	94th Relay	752
P197	Relay	95th Relay	760
P198	Relay	96th Relay	768
P199	Relay	97th Relay	776
P200	Relay	98th Relay	784
P201	Relay	99th Relay	792
P202	Relay	100th Relay	800
P203	Relay	101st Relay	808
P204	Relay	102nd Relay	816
P205	Relay	103rd Relay	824
P206	Relay	104th Relay	832
P207	Relay	105th Relay	840
P208	Relay	106th Relay	848
P209	Relay	107th Relay	856
P210	Relay	108th Relay	864
P211	Relay	109th Relay	872
P212	Relay	110th Relay	880
P213	Relay	111th Relay	888
P214	Relay	112th Relay	896
P215	Relay	113th Relay	904
P216	Relay	114th Relay	912
P217	Relay	115th Relay	920
P218	Relay	116th Relay	928
P219	Relay	117th Relay	936
P220	Relay	118th Relay	944
P221	Relay	119th Relay	952
P222	Relay	120th Relay	960
P223	Relay	121st Relay	968
P224	Relay	122nd Relay	976
P225	Relay	123rd Relay	984
P226	Relay	124th Relay	992
P227	Relay	125th Relay	1000
P228	Relay	126th Relay	1008
P229	Relay	127th Relay	1016
P230	Relay	128th Relay	1024
P231	Relay	129th Relay	1032
P232	Relay	130th Relay	1040
P233	Relay	131st Relay	1048
P234	Relay	132nd Relay	1056
P235	Relay	133rd Relay	1064
P236	Relay	134th Relay	1072
P237	Relay	135th Relay	1080
P238	Relay	136th Relay	1088
P239	Relay	137th Relay	1096
P240	Relay	138th Relay	1104
P241	Relay	139th Relay	1112
P242	Relay	140th Relay	1120
P243	Relay	141st Relay	1128
P244	Relay	142nd Relay	1136
P245	Relay	143rd Relay	1144
P246	Relay	144th Relay	1152
P247	Relay	145th Relay	1160
P248	Relay	146th Relay	1168
P249	Relay	147th Relay	1176
P250	Relay	148th Relay	1184
P251	Relay	149th Relay	1192
P252	Relay	150th Relay	1200
P253	Relay	151st Relay	1208
P254	Relay	152nd Relay	1216
P255	Relay	153rd Relay	1224
P256	Relay	154th Relay	1232
P257	Relay	155th Relay	1240
P258	Relay	156th Relay	1248
P259	Relay	157th Relay	1256
P260	Relay	158th Relay	1264
P261	Relay	159th Relay	1272
P262	Relay	160th Relay	1280
P263	Relay	161st Relay	1288
P264	Relay	162nd Relay	1296
P265	Relay	163rd Relay	1304
P266	Relay	164th Relay	1312
P267	Relay	165th Relay	1320
P268	Relay	166th Relay	1328
P269	Relay	167th Relay	1336
P270	Relay	168th Relay	1344
P271	Relay	169th Relay	1352
P272	Relay	170th Relay	1360
P273	Relay	171st Relay	1368
P274	Relay	172nd Relay	1376
P275	Relay	173rd Relay	1384
P276	Relay	174th Relay	1392
P277	Relay	175th Relay	1400
P278	Relay	176th Relay	1408
P279	Relay	177th Relay	1416
P280	Relay	178th Relay	1424
P281	Relay	179th Relay	1432
P282	Relay	180th Relay	1440
P283	Relay	181st Relay	1448
P284	Relay	182nd Relay	1456
P285	Relay	183rd Relay	1464
P286	Relay	184th Relay	1472
P287	Relay	185th Relay	1480
P288	Relay	186th Relay	1488
P289	Relay	187th Relay	1496
P290	Relay	188th Relay	1504
P291	Relay	189th Relay	1512
P292	Relay	190th Relay	1520
P293	Relay	191st Relay	1528
P294	Relay	192nd Relay	1536
P295	Relay	193rd Relay	1544
P296	Relay	194th Relay	1552
P297	Relay	195th Relay	1560
P298	Relay	196th Relay	1568
P299	Relay	197th Relay	1576
P300	Relay	198th Relay	1584
P301	Relay	199th Relay	1592
P302	Relay	200th Relay	1600
P303	Relay	201st Relay	1608
P304	Relay	202nd Relay	1616
P305	Relay	203rd Relay	1624
P306	Relay	204th Relay	1632
P307	Relay	205th Relay	1640
P308	Relay	206th Relay	1648
P309	Relay	207th Relay	1656
P310	Relay	208th Relay	1664
P311	Relay	209th Relay	1672
P312	Relay	210th Relay	1680
P313	Relay	211st Relay	1688
P314	Relay	212nd Relay	1696
P315	Relay	213th Relay	1704
P316	Relay	214th Relay	1712
P317	Relay	215th Relay	1720
P318	Relay	216th Relay	1728
P319	Relay	217th Relay	1736
P320	Relay	218th Relay	1744
P321	Relay	219th Relay	1752
P322	Relay	220th Relay	1760
P323	Relay	221st Relay	1768
P324	Relay	222nd Relay	1776
P325	Relay	223rd Relay	1784
P326	Relay	224th Relay	1792
P327	Relay	225th Relay	1800
P328	Relay	226th Relay	1808
P329	Relay	227th Relay	1816
P330	Relay	228th Relay	1824
P331	Relay	229th Relay	1832
P332	Relay	230th Relay	1840
P333	Relay	231st Relay	1848
P334	Relay	232nd Relay	1856
P335	Relay	233rd Relay	1864
P336	Relay	234th Relay	1872
P337	Relay	235th Relay	1880
P338	Relay	236th Relay	1888
P339	Relay	237th Relay	1896
P340	Relay	238th Relay	1904
P341	Relay	239th Relay	1912
P342	Relay	240th Relay	1920
P343	Relay	241st Relay	1928
P344	Relay	242nd Relay	1936
P345	Relay	243rd Relay	1944
P346	Relay	244th Relay	1952
P347	Relay	245th Relay	1960
P348	Relay	246th Relay	1968
P349	Relay	247th Relay	1976
P350	Relay	248th Relay	1984
P351	Relay	249th Relay	1992
P352	Relay	250th Relay	2000
P353	Relay	251st Relay	2008
P354	Relay	252nd Relay	2016
P355	Relay	253rd Relay	2024
P356	Relay	254th Relay	2032
P357	Relay	255th Relay	2040
P358	Relay	256th Relay	2048
P359	Relay	257th Relay	2056
P360	Relay	258th Relay	2064
P361	Relay	259th Relay	2072
P362	Relay	260th Relay	2080
P363	Relay	261st Relay	2088
P364	Relay	262nd Relay	2096
P365	Relay	263rd Relay	2104
P366	Relay	264th Relay	2112
P367			

COMM			
Par.	Description	Unit	Value
P368	PortBaud	BaudRate	38400
P369	PortFlow	RTS/CTS	14400
P370	PortFlow	DTR/DSR	8655
P371	PortFlow	NRZ	5 - Disabled
P372	PortFlow	NRZ	5 - Disabled
P373	PortFlow	NRZ	5 - Disabled
P374	PortFlow	NRZ	5 - Disabled
P375	PortFlow	NRZ	5 - Disabled
P376	PortFlow	NRZ	5 - Disabled
P377	PortFlow	NRZ	5 - Disabled
P378	PortFlow	NRZ	5 - Disabled
P379	PortFlow	NRZ	5 - Disabled
P380	PortFlow	NRZ	5 - Disabled
P381	PortFlow	NRZ	5 - Disabled
P382	PortFlow	NRZ	5 - Disabled
P383	PortFlow	NRZ	5 - Disabled
P384	PortFlow	NRZ	5 - Disabled
P385	PortFlow	NRZ	5 - Disabled
P386	PortFlow	NRZ	5 - Disabled
P387	PortFlow	NRZ	5 - Disabled
P388	PortFlow	NRZ	5 - Disabled
P389	PortFlow	NRZ	5 - Disabled
P390	PortFlow	NRZ	5 - Disabled
P391	PortFlow	NRZ	5 - Disabled
P392	PortFlow	NRZ	5 - Disabled
P393	PortFlow	NRZ	5 - Disabled
P394	PortFlow	NRZ	5 - Disabled
P395	PortFlow	NRZ	5 - Disabled
P396	PortFlow	NRZ	5 - Disabled
P397	PortFlow	NRZ	5 - Disabled
P398	PortFlow	NRZ	5 - Disabled
P399	PortFlow	NRZ	5 - Disabled
P400	PortFlow	NRZ	5 - Disabled
P401	PortFlow	NRZ	5 - Disabled
P402	PortFlow	NRZ	5 - Disabled
P403	PortFlow	NRZ	5 - Disabled
P404	PortFlow	NRZ	5 - Disabled
P405	PortFlow	NRZ	5 - Disabled
P406	PortFlow	NRZ	5 - Disabled
P407	PortFlow	NRZ	5 - Disabled
P408	PortFlow	NRZ	5 - Disabled
P409	PortFlow	NRZ	5 - Disabled
P410	PortFlow	NRZ	5 - Disabled
P411	PortFlow	NRZ	5 - Disabled
P412	PortFlow	NRZ	5 - Disabled
P413	PortFlow	NRZ	5 - Disabled
P414	PortFlow	NRZ	5 - Disabled
P415	PortFlow	NRZ	5 - Disabled
P416	PortFlow	NRZ	5 - Disabled
P417	PortFlow	NRZ	5 - Disabled
P418	PortFlow	NRZ	5 - Disabled
P419	PortFlow	NRZ	5 - Disabled
P420	PortFlow	NRZ	5 - Disabled
P421	PortFlow	NRZ	5 - Disabled
P422	PortFlow	NRZ	5 - Disabled
P423	PortFlow	NRZ	5 - Disabled
P424	PortFlow	NRZ	5 - Disabled
P425	PortFlow	NRZ	5 - Disabled
P426	PortFlow	NRZ	5 - Disabled
P427	PortFlow	NRZ	5 - Disabled
P428	PortFlow	NRZ	5 - Disabled
P429	PortFlow	NRZ	5 - Disabled
P430	PortFlow	NRZ	5 - Disabled
P431	PortFlow	NRZ	5 - Disabled
P432	PortFlow	NRZ	

To configure and monitor the digital inputs:

Digital input states and functions:

show whether each input detects an open or closed circuit and the function the input performs.

Digital Input States and Function Selectors:

set the function for each digital input. Click DI1 or DI2 to expand the options.

Status and Setup Indicators:

Digital input status: light on when the input is a closed circuit

Enable indicator: light on when the power controller is enabled

Enable/Disable button: click on to enable the power controller if a digital input is not configured for this function

ON indicator: light on when there is demand for the output to be on

SC indicator: light on when there is a shorted SCR alarm active

HB indicator: light on when there is a heater break alarm active

TH indicator: light on when the heat sink over temperature alarm is active

I Lim indicator: light on when the load current exceeds the current limit setting

Unit Size: indicate the maximum rated current of the power controller

Max Volt: indicate the maximum rated voltage for the power controller

V Aux: indicate the voltage the auxiliary input is set to use for powering the electronics

Input Type1: indicate the signal analog input 1's type

Input Type2: indicate the signal analog input 2's type

DI1: indicate digital input 1's function

DI2: indicate digital input 2's function

Firing: indicate the firing type the power controller is set to use

Feedback: indicate the feedback type the power controller is set to use




Data Log: indicate the Data Log status.

Buttons setup options:

Firing: view and set the firing type and the associated parameters

Feedback: view and set feedback type

Communication: view and set communication options for ports, protocols and fieldbus

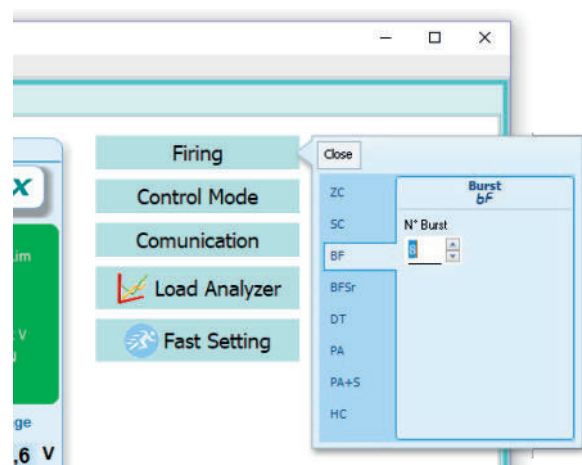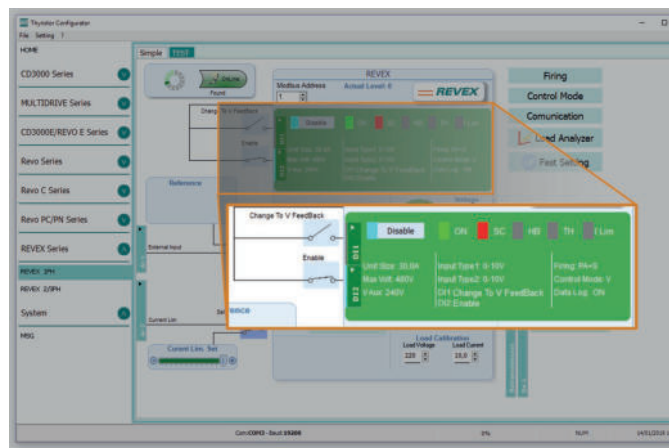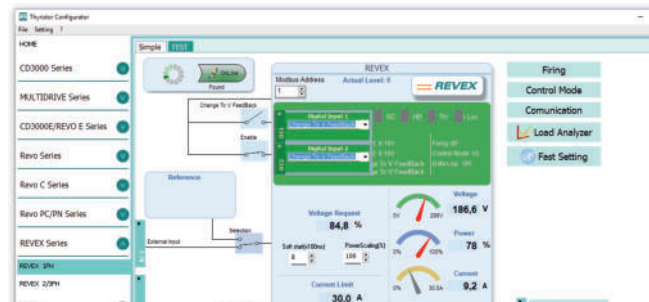

Configure and monitor the analog inputs:

Analog Input 1: click Ai 1 to view the signal type

Input Local/Remote selection button: click to toggle between using the signal received at analog input 1 (remote) or the slider (local) to set the set point.

Reference: drag the slider, click the increment (+) or decrement (-) buttons or click one of the three percentages (0%, 50% or 100%) to set the set point when the set point source is set to local.

Analog Input 2: click Ai 2 to view the signal type and function

To configure and monitor the power controller:

Power Request: show the set point signal from analog input 1.

The value is a percent of full scale or can be set with the reference slider

Soft Start Time: show the time over which set point changes are ramped

Output Scaling: show the scaling applied to the set point signal before it is used by the control loop

Voltage indicator: show the RMS load voltage

Power indicator: show the RMS load power

Current indicator: show the RMS load current

Current Limit Set: indicates the current limit set point

Bakeout button: click to view and set the heater bakeout feature options

Load Calibration: set and view the nominal line voltage and nominal load current settings for the application.



NOTE! The Load Calibration settings, Load Voltage and Load Current define 100% power for the load.

10.6.4. Load Analyzer

Load Analyzer is used for monitoring values graphically represented

Click on **Load Analyzer** button on the test page to open Load Analyzer window.

It's possible to see 3 channels (Ch 1, Ch 2 and Ch 3).

For each channel configure a pen on the graph:

On/Off button: click to start trending data reading

PV: choose the parameter to trend

Show: set this option to display or hide the trend

Show Mark: set this option to display data markers along the trend in the graph area

Live!: click to view the current waveform on a graph.

Data Log: click to open the Data Log window.

The **History** options to control the movement of the chart:

Scroll left-click: move the chart left to view more recent data

Stop/Play-click: toggle the live view or Hystorical view of graphic signal

Scroll right-click: move the chart right to view older data

The **Actions** to:

Clear: to clear the data from the graph

Save: to save a JPEG image of the **Load Analyzer** window with the current trends

Export: to open a window that includes the trend graph and table with the currently displayed data that can be saved as a JPEG or exported to a CSV file.

Use the **X – Scale** settings to adjust the horizontal (time) axis:

Min: set the minutes of data displayed

Sec: set the seconds of data displayed

Filter: set this option to filter the data

Use the **Y – Scale** settings to adjust the vertical (percent of full scale) axis

Max: set the maximum value for the vertical axis

Reset: click to reset the vertical axis scaling



NOTE! Use the increment (up arrow) and decrement (down arrow) buttons to adjust the x and y scales. Numeric entry does not allow the full range of values to be set.



10.6.5 Live! Scope

This view provides a graph of current waveform over a few sample cycles. Data will be automatically updated when Enable will be selected.

Use these options to configure the displayed data:

Enable: set this option to view the current on the graph

Save: click to save a JPEG image of current window

Show Data: click to open the Data panel on the right of the graph that shows the data points for the current sample

Auto Scale: select this option so that the Configurator automatically adjusts the X and Y axis settings.

Y Axis:

Max: show or set the high end of the vertical axis

Min: show or set the low end of the vertical axis


Marks: set this option to display data markers along the trend in the graph area.

X Axis (future use):

Max: show actually high end of the horizontal axis

Min: show actually low end of the horizontal axis

Reset X: Reset the high end and low end of of the horizontal axis to initial value after a zoom action.

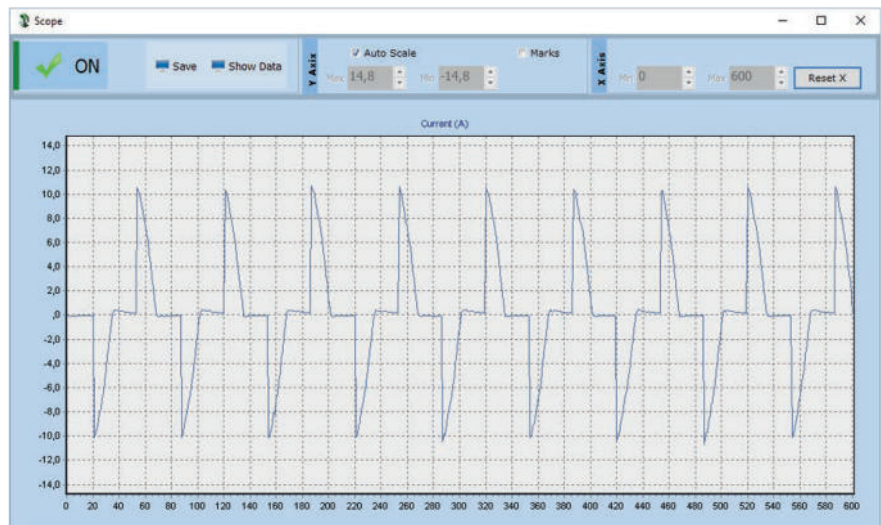

10.6.6 MSG view

Message view shows the communication activity between the computer and the power controller.

PORT

COM: use this view to see when the COM port is accessed and its settings

MODBUS: Modbus communication protocol area

READ Area: use this view to see parameters being polled

READ Area -> En Log: enable a short read communication log activity

READ Area -> En Detail: if En Log enabled enable a detailed read communication log activity

READ Area -> Only Error: if En Log enabled enable a read communication log activity only in error

WRITE Area: use this view to see which parameters and values are sent to the power control


READ Area -> En Log: enable a write communication log activity

Log Msg: use this view to see the "Data Log" protocol detail when Data Log window is active

Status: view the status and settings of the COM port

SYSTEM

Memory: view the memory usage of the Configurator software on the computer

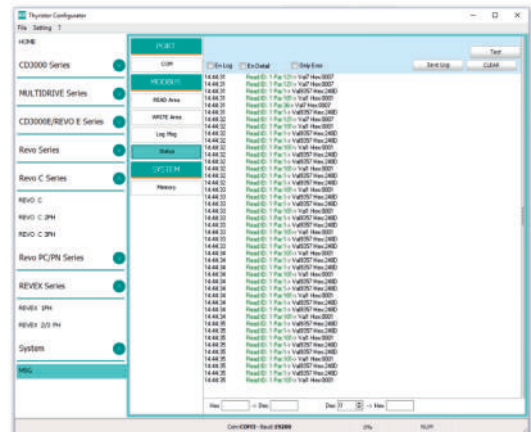

10.6.7 Settings window

Use this window to choose user-settable options for the Configurator software.

Language:

Available Languages: choose the language used in the software



NOTE! to activate the language change, you need to close and open again the Configurator software

Serial Port: Set the serial port parameter

Test: click to test for communication with a power controller via the selected port

Port: select the computer's COM port to use to communicate with power controllers

Baud rate: select Auto to allow the Configurator to set the baud rate for the COM port or deselect the option to manually set the baud rate.

Options: Set the configurator options

List Options: set whether or not parameter values are displayed in hexadecimal in simple view recipes

Directory: set the directories in which recipes and images are saved


Disable Check Type: set to allow communication with power controllers that are not precise matches for the supported types. Used only for special version. Note that set is not memorized after software shutdown

View:

Hide Tool Bar: future use

Hide Status Bar: select to hide the status bar that appears at the bottom of the program window

Show Instruments: Hide or show the available instrument in the left side of main windows

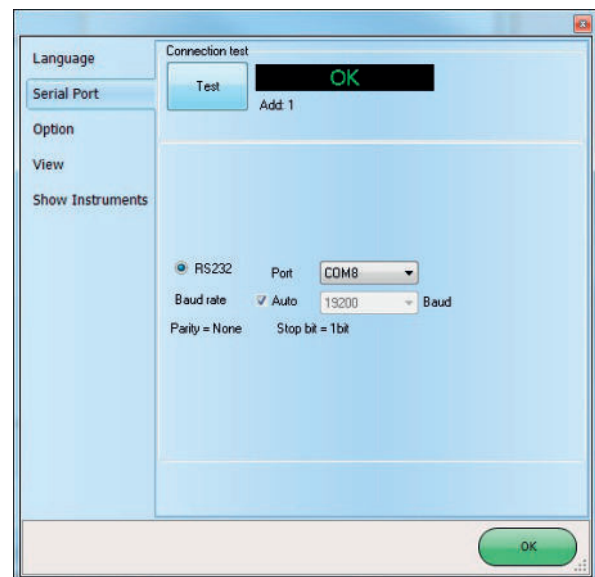

11

Configurable Inputs and Outputs

The REVEX power controller features two digital inputs, up to two analog inputs and a relay output. Some models also include an analog output for retransmitting a measured value to other automation equipment. This section describes the various functions of these inputs and outputs and how they interact with other features of the power controller.

11.1 Digital Inputs

The REVEX power controller has two optically-isolated, digital inputs that can be connected to control panel switches or other automation equipment such as a temperature controller or programmable logic controller. Using Digital In 1 Function and Digital In 2 Function on the hardware menu each digital input can be configured to perform one of the following:

- **Enable:** the power output is off unless this signal is on. If both digital inputs are set to this option, the state of digital input 2 takes precedence (DI2 Default Configuration).
- **Voltage Feedback:** this signal overrides the feedback setting. When this signal is on, the control loop uses voltage feedback. When the signal is off, the loop reverts to the feedback parameter setting (DI1 default Configuration).
- **Local / Remote:** this signal selects how the set point is set. When this signal is on, the control loop's set point is set using the keypad or through communications. When this signal is off, the set point is set by the an analog input. When a digital input is set to this function, the Local/Remote (L/R) button on the front panel cannot be used to choose the source of the set point.
- **Phase Angle:** this signal overrides the Firing setting. When this signal is on, the power controller uses phase-angle firing. When the signal is off, the controller uses the method set with the firing parameter on the advanced setup menu.
- **SP Analog In 1 / 2:** this signal chooses which of the two analog inputs is used as the source of the set point when the remote set point is in effect. When this signal is off, analog input 1 is the source of the remote set point. When the signal is on, analog input 2 is the source of the remote set point.
- **Logging:** this signal turns data logging on or off. When the signal is on, data is logged. When the signal is off, data is not logged. When this signal is on, it supersedes the setting of the Logging parameter on the advanced setup menu.
- **Heater Bakeout:** this signal turns the heater bakeout feature on or off. When the signal is on, the heater bakeout feature is enabled. When the signal is off, the heater bakeout feature is disabled. When this signal is on, it supersedes the setting of the Heater Bakeout parameter on the advanced setup menu.
- **Fast Enable (SSR Input):** configuration used for SSR input (see figure in paragraph 8.2.1). This input configuration allows controlling the unit with a logic signal (ON / OFF) with voltage $4 \div 30\text{Vdc}$ 5mA Max (ON $\geq 4\text{Vdc}$ OFF $< 1\text{Vdc}$) - 3HZ Max on time min. 100 ms. When the Fast Enable input is enabled, Phase Angle firing is automatically selected.
- **Alarm Reset:** reset the Alarm relay Output if an alarm/s triggered. When this function is selected, and the digital input is on, the HB alarm resets. If the Digital Input is off and the problem persist, the alarm is reactivated.

To configure how the power controller uses these signals, see "Digital In 1 Function" and "Digital In 2 Function" on Paragraph **9.4.4 Hardware menu**.

11.2 Analog Input 1: Set Point

To control the power to the load with a device such as a temperature controller, connect the control signal to analog input 1.

This input accepts current, voltage and potentiometer signals. The signal is interpreted as set point by comparing the measured value to the input's full scale. For example, the set point is 50% when the analog input detects 5V and the input is configured to receive 0 to 10Vdc.

Configure the power controller to recognize the signal with the hardware menu; see "Analog In 1" on Paragraph **9.4.4 Hardware menu**. For instructions for wiring see paragraph 8.2 Schematic.

11.3 Analog Input 2: Set Point, Feedback or Current Limit Set Point

What this input does is user-configurable. Connect an analog signal that indicates:

- An alternate set point signal
- Measured power, voltage or current from an external device used as feedback
- Maximum current to the load (current limit).

This input accepts current, voltage and potentiometer signals. The signal is interpreted by comparing its measured value to the input's full scale. For example, the signal is 50% when the analog input detects 12mADC and the input is configured to receive 4 to 20mADC.

Configure the power controller to recognize the signal and how the power controller uses it on the hardware menu; see "Analog In 2" on Paragraph **9.4.4 Hardware menu**. For instructions for wiring see paragraph 8.2 Schematic.

11.4 Alarms and Alarm Relay Output

When an alarm occurs and while the condition persists, the alarm relay is de-energized. The alarm relay is energized when power is supplied to the controller's electronics via the auxiliary power input and there are no alarms.

Choose which conditions determine the alarm relay output with the Alarm Function setting on Paragraph **9.4.4 Hardware menu**.

Alarm Function Options

	Alarm Output Energizes for...				
	Heater Break	Shorted SCR	Current Limit	Communication Watchdog Error	Heat Sink Over Temperature
None					X
Heater Break (HB)	X				X
SCR Short (SC)		X			X
I Limit (IL)			X		
HB / SC	X	X			X
HB / IL	X		X		
SC / IL		X	X		
HB / SC / IL	X	X	X		
Watchdog (WD)				X	X
WD / HB	X			X	X
WD / SC		X		X	X
WD / SC / HB	X	X		X	X
WD / IL			X		
WD / IL / HB	X		X	X	X
WD / IL or SC		X	X		
WD / IL or SC / HB	X	X	X	X	X



NOTE! The alarm relay output indicates an alarm whenever the temperature of the heat sink is too high even when Alarm Function on the hardware menu is set to None.



NOTE! The power controller monitors for heater break or short circuit conditions only when included in the option selected for Alarm Function.

12

Alarm description

12.1 Heater Break Alarm

This option allows you to diagnose any load breakage. The diagnostics is based on the comparison of the value of the nominal resistance of the load with respect to the resistance measured in real time. The nominal resistance is calculated using the **Operative Load Voltage (Nom Line V)** and **Nominal Current of the load (Nominal I)** parameters.

Nominal Resistance $R = \text{Nom Line V} / \text{Nominal I}$

The alarm threshold value is the value of the nominal resistance increased by the percentage defined by the HB Sense parameter

Example:

Resistance 2200W @ 220V


power/voltage= A --> $2200/220 = 10\text{A}$

• nominal V: 220 V


• nominal I: 10A

• Nominal resistance - $R = 22\text{ Ohm}$



HB sense parameter = 20% --> threshold value = $22 + (22 \times 20 / 100) = 22 + 4,4\text{ Ohm} = 26,4\text{ Ohm}$

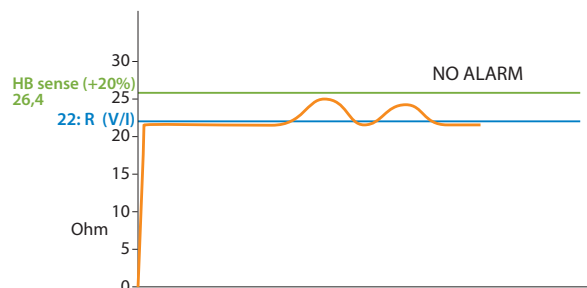

The alarm activates when the detected Runtime resistance exceeds the value of 26.4 Ohm.

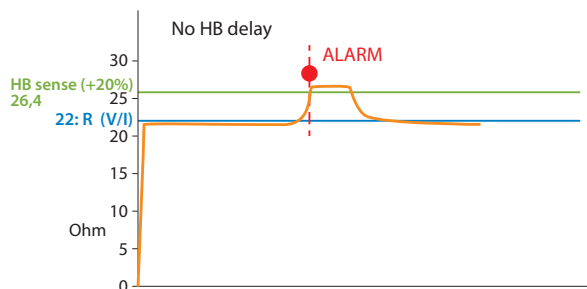

Using the HB Delay parameter, the alarm intervention can be delayed.

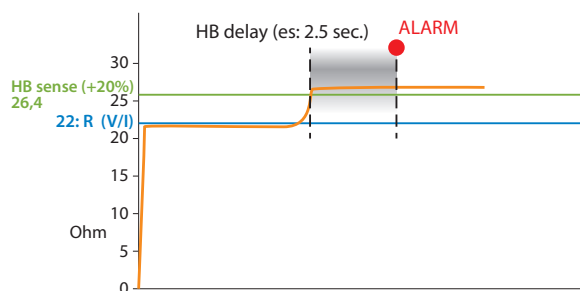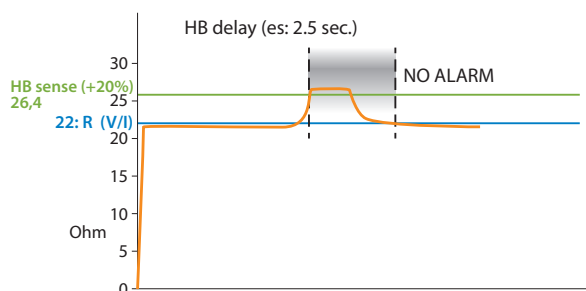

Sensitivity (HB sense) and delay (HB delay) can be varied according to the application (see parameters on pages 32-33).

12.2 AUX High

This alarm is displayed when the auxiliary supply voltage exceeds the established ranges. If the alarm situation persists for more than 5 seconds, the unit will go into protection.

12.3 AUX Low

This alarm is displayed when the auxiliary supply voltage is lower than the established ranges. This alarm condition could lead to incorrect unit operation.

12.4 ComError

If the communication watchdog function is enabled (watchdog ON) this alarm is activated when there is no data passage within the time established by the "WD reset" parameter.

12.5 AUX Line Loss

This alarm is activated when there is no auxiliary voltage.

12.6 Line Loss

This alarm is activated when L1 and L2 are not detected.

12.7 I Limit

This alarm is activated when the operating current exceeds the current limit value set in the I Limit SP parameter.

12.8 SHRT

This alarm is activated if the unit detects a short circuit in one of the power devices. This alarm could also activate when the current measured by the unit is greater than 80% of the value set in Nominal I.

13

“Enable” Function in static Unit

The “Enable” function can work in several ways

- from Digital input
- from Serial Port
- from Digital Input + Serial Port
- from FieldBus
- from Digital Input + FieldBus

To simplify in the various diagrams, the “enable” command from serial port will be represented by a “Software contact” abbreviated as Sw_S , and the command from digital input is abbreviated as Sw_H .

13.1 Using Digital Input only


By setting the Digital Input as “Enable” it is possible to control the enable from Digital Input.

By closing the digital input via Sw_H contact, the unit will be enabled and by opening the digital input the unit will be disabled.

The status can be read on bit 2 of parameter 14 on the serial port.

If bit 2 = 1: Enabled

If bit 2 = 0: Disabled

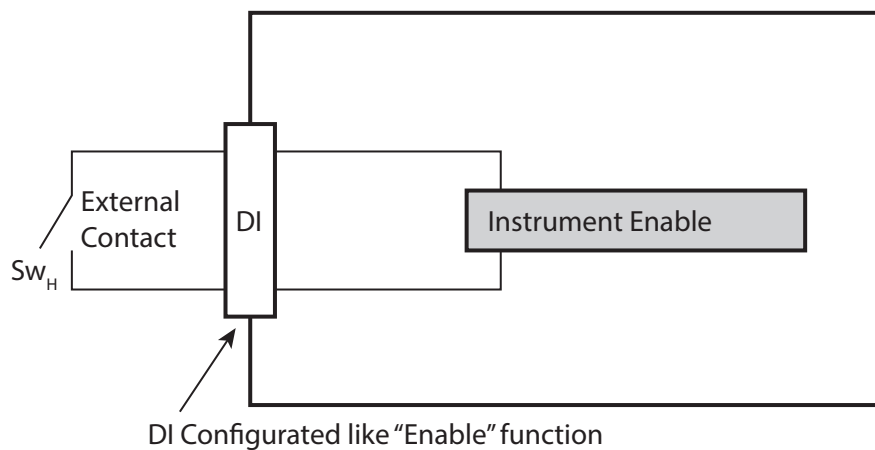

Sw_H = Switch hardware


13.2 Using Serial Port RS485 only

The static unit has an RS485 Modbus RTU serial port always present.

By setting the Digital Input as "Not Used" or different from "Enable" it is possible to control the enable from serial port with bit 2 of parameter 14

If bit 2 = 1: Enabled

If bit 2 = 0: Disabled

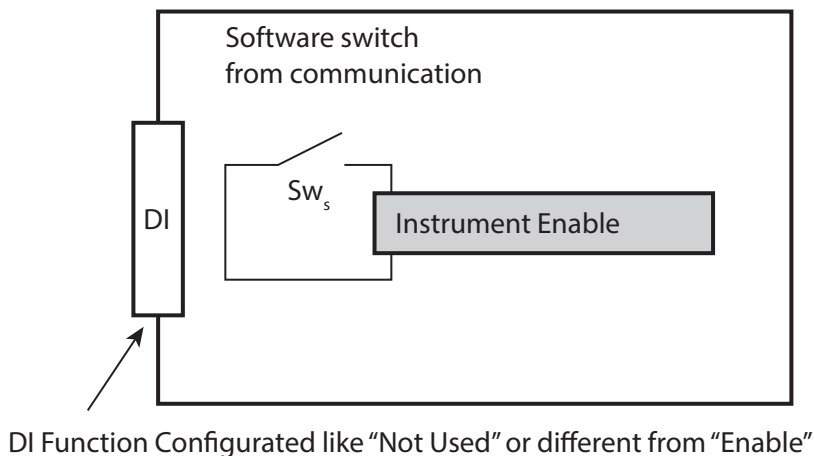

Sw_s = Switch software

13.3 Using Digital Input + Serial Port RS485


The static unit has the serial port as standard RS485 Modbus RTU always present.

The external contact Sw_H and the internal software contact Sw_s are connected in series, therefore if you want to enable the static unit, both contacts must be enabled.

Each variation of the Sw_H contact connected on the digital Input (DI) is shown on the internal Sw_s contact, allowing correct operation.

Using the serial port it is possible to change the status of the Sw_s contact with bit 2 of parameter 14, bearing in mind that it will be overwritten when the digital input is subsequently changed.

This configuration is useful for having an external contact for a safety or emergency alternative to the serial command.

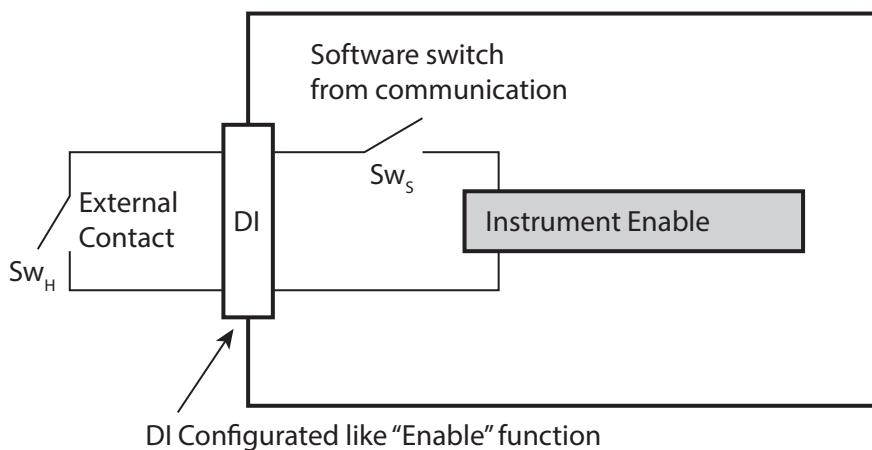

Sw_H = Switch hardware


Sw_s = Switch software

13.4 Using FieldBus only

The static unit as an option can be ordered with a FieldBus (Ex: profinet).

This option continuously writes the values on the unit keeping them up to date.

Using the field bus it is possible to change the status of the Sw_s contact with bit 2 of the "Command table" (See the communication manual of the respective FieldBus).

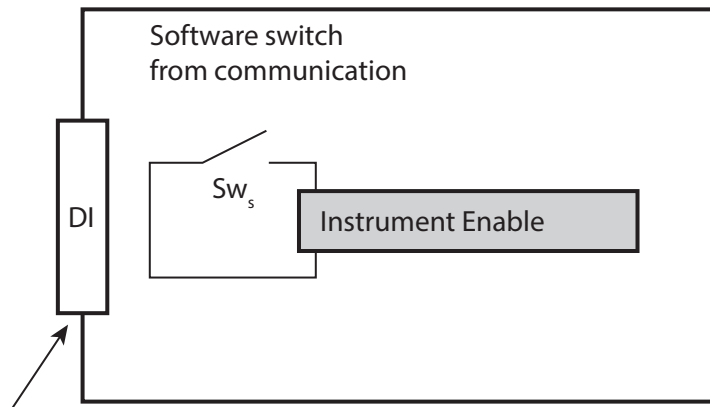

DI Function Configured like "Not Used" or different from "Enable"

Sw_s = Switch software

NOTE:

The parameters written are:

- command table
- reference
- rescaling

if the FieldBus is active but disconnected these values will be forced to 0.

13.5 Using Digital Input + FieldBus


The static unit as an option can be ordered with a FieldBus (Ex: profinet).

This option continuously writes the values on the unit keeping them up to date.

The external contact Sw_H and the internal software contact Sw_S are connected in series, therefore if you want to enable the static unit, both contacts must be enabled.

Using the FieldBus it is possible to change the status of the Sw_S contact with bit 2 of the "Command table" (See the communication manual of the respective FieldBus), bearing in mind that the Sw_H contact must also be closed to enable it.

This configuration is useful for having an external contact for a safety or emergency alternative to the FieldBus.

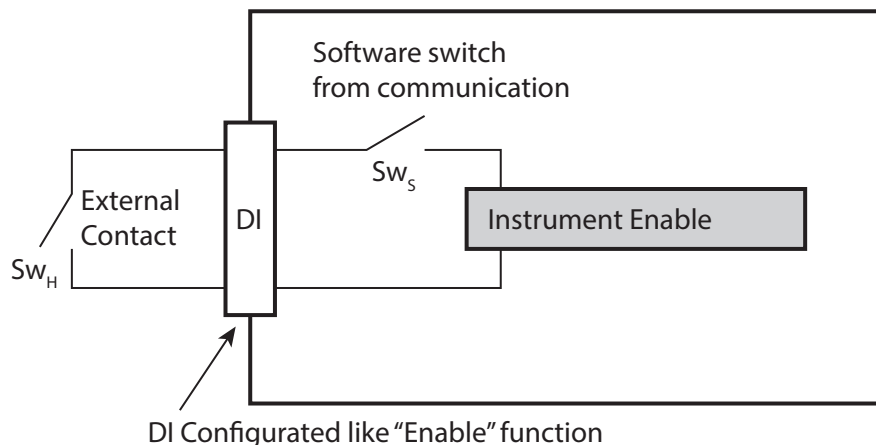

Sw_H = Switch hardware

Sw_S = Switch software

NOTE:

The parameters written are:

- command table
- reference
- rescaling

if the FieldBus is active but disconnected these values will be forced to 0.

14

Firing type

Choose a correct firing type allows to optimize the thyristor unit for the installed load. The firing type has already configured in line with customer requirements that are defined in the Order Code. The Order Code is written on the identification label. However, if you wish to change the firing type you can use the software configurator or the Control Panel.




Caution: this procedure must be performed only by qualified persons.

14.1 Zero Crossing

ZC firing mode is used with Logic Output from temperature controllers and the Thyristor operates like a contactor.

The Cycle time is performed by temperature controller. ZC minimizes interferences because the Thyristor unit switches ON-OFF at zero voltage.

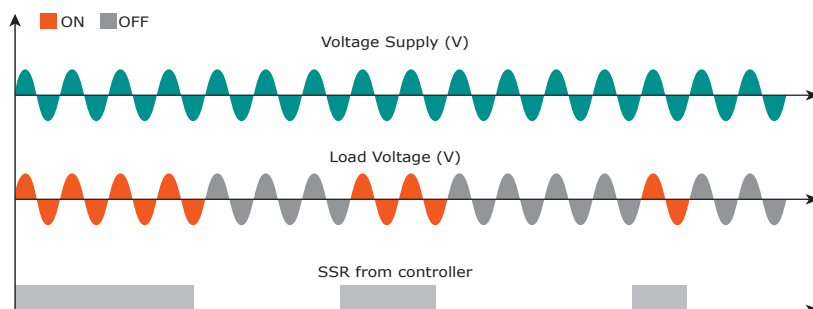

14.2 Single Cycle

Single Cycle it's the faster zero crossing switching method in relationship of the power demand from a temperature regulator or from an external signal.

With input signal at 25% the output is one cycle ON and three cycles OFF.


With input signal at 50% the output is one cycle ON and one cycle OFF.

With input signal at 75% the output is three cycles ON and one cycle OFF.

With input signal at 76% the output is the same of 75% but for each ON cycle the microprocessor divides 76/75, and when the sum of rests is one, the unit does one more cycle ON.

For this firing is necessary to have analog input.

The Single Cycle is used to control the loads with low inertia or for infrared lamps to short wave.

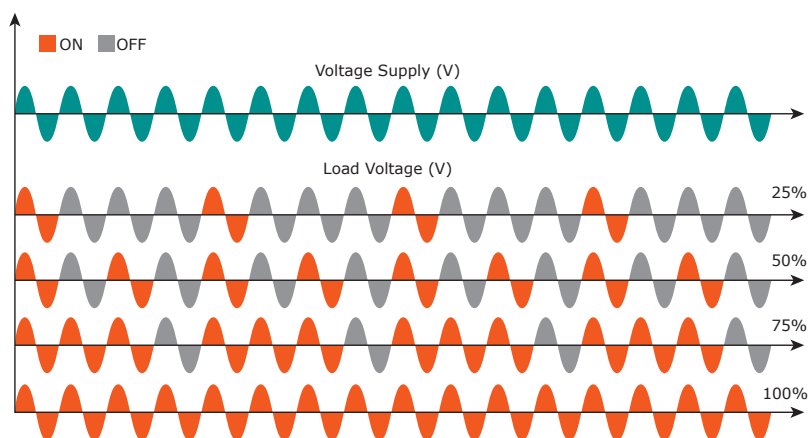


14.3 Burst Firing

The Burst Firing is similar to the Single Cycle, but consecutive cycles ON are selectable between 1 and 255, with input signal equal at 50%. When is specified 1 the firing type is Single Cycle.

Burst Firing is a method zero crossing that it reduces the electromagnetic interferences because the thyristor switches at zero voltage crossing.

The example show the Burst Firing with Burst cycles=4.

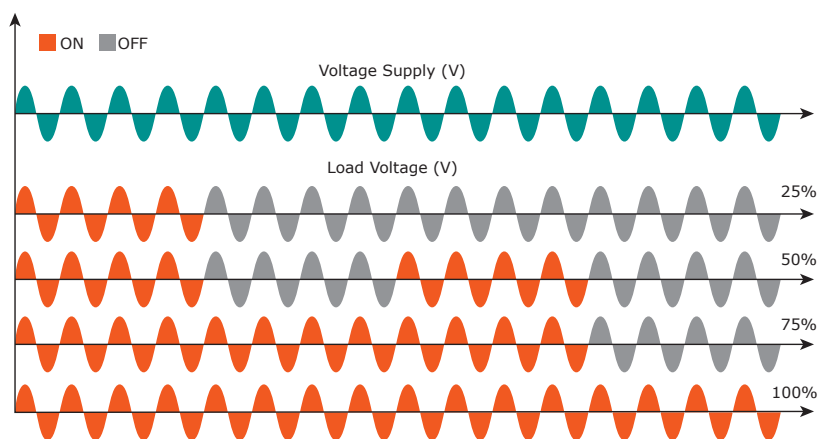


14.4 Soft Start with Burst Firing

This is an additional function to the Burst Firing. The unit start in phase angle mode with a ramp starting from zero up to the full tension in the cycles number set in the parameter.

When the ramp is over, the thyristor unit will stay in conduction at full voltage up to the end of cycles of burst. The S+BF firing is used to control small inductive loads to avoid inrush surge current and to reduce the electromagnetic interferences.

The example show the firing with Burst cycles =4 and start ramp half cycles=3.

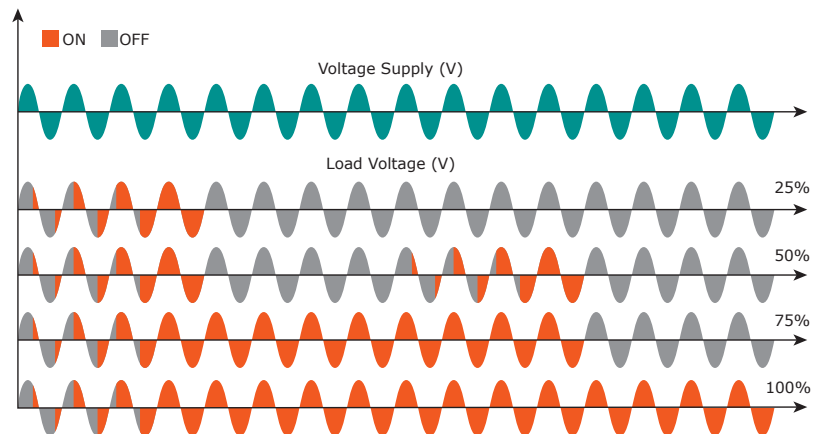


14.5 Phase Angle

The Phase Angle firing allow the control of the power on the load, for this firing the thyristor can be in conduction only for a part of the voltage cycle.

This part of the voltage cycle is adjustable in function of the input signal from 0 at 100%.

The PA firing is normally used for control the inductive loads, and is also possible control a primary of transformer coupled with the cold resistances like: Superkanthal, Molybdenum, Platinum, Tungsten or Quartz Lamp. The only disadvantage with phase angle is the possible generation of interferences that however can be reduced with opportune filters.

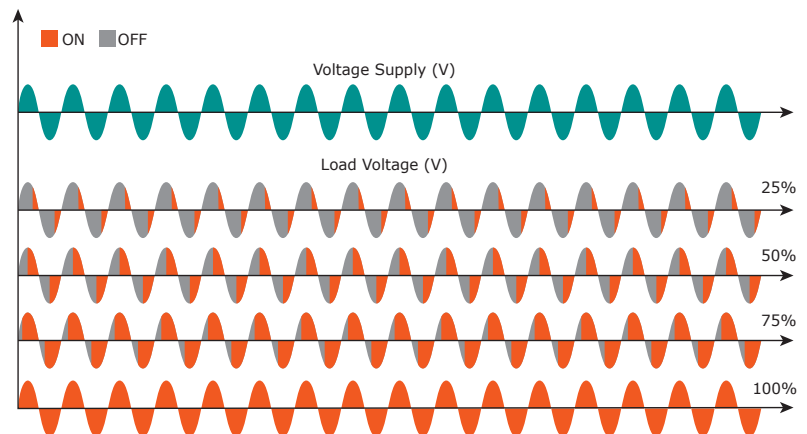


14.6 Soft Start with Phase Angle

This is an additional function to the Phase Angle. The firing angle of the thyristor increase or decrease up to the final setpoint value.

The Soft start ramp is an important feature to reduce the inrush current with transformers during the cycle of magnetization or with cold resistance that are near to the short circuit when they are supplied.

Setpoint Ramp Up / Setpoint Ramp Down.

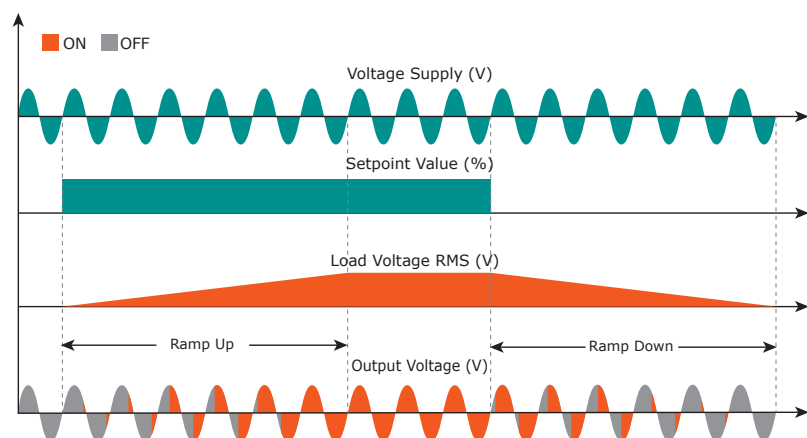


14.7 Delay Triggering with Burst Firing

The Delay Triggering firing is used to control a primary of transformer coupled with the normal resistances on the secondary (N.B. don't connect cold resistances on the secondary like: Superkanthal, Molybdenum, Platinum, Tungsten, Quartz Lamp).


For an inductive load (ex transformer), switching the thyristors at zero crossing can generate transient over currents that can blow the fuses, to avoid this problem you must use the Delay Triggering. This firing delay the first half cycle of Burst for an angle from 0 to 100° relative to the zero.

For understand the Delay Triggering firing, we have represented the waves generate by vectors that rotates in counterclockwise: Without delay at zero crossing when V_1 is to zero (projected on the X axis) the unit switch On.


Without Delay Triggering

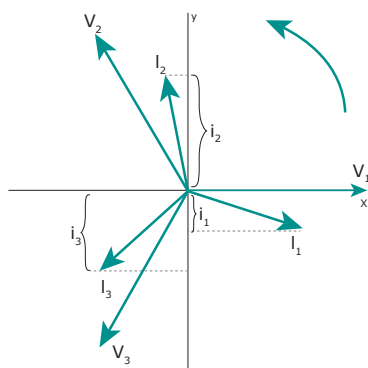


With Delay Triggering

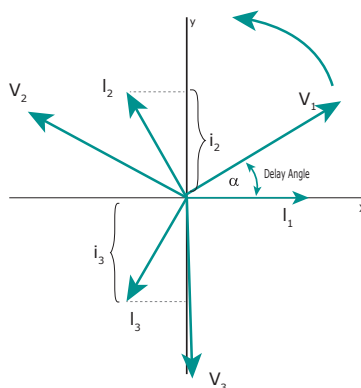

Without Delay Triggering

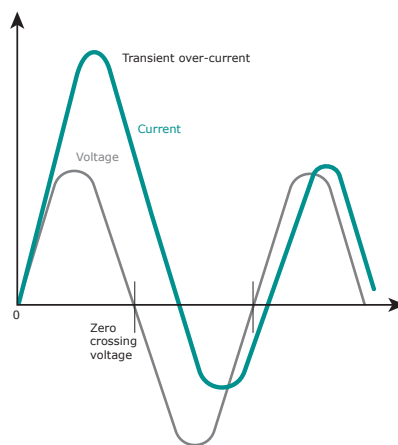

With Delay Triggering

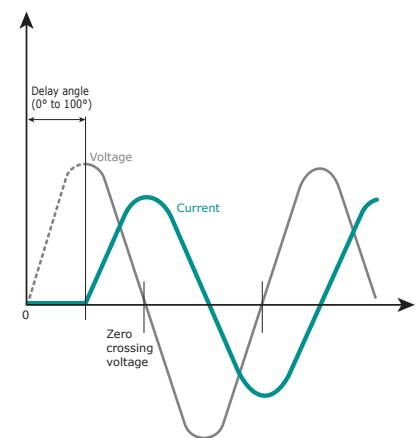

In this case the instantaneous value of the currents are i_1 , i_2 and i_3 and this condition, for the curve of magnetization, could generate transient over currents that can blow the fuses.

With Delay Triggering the firing of the thyristor are triggered with a delay until the instantaneous value of the current $i_1=0$, i_2 positive and i_3 negative like represented.

In this case the risk of transient over currents is reduced and the fuses don't blow.

The angle alpha is the delay to


have $i_1=0$ and this angle depends on the power factor. The delay angle suggest for most applications is 80°.

14.8 Half Cycle

To reduce the power fluctuations on the ignition period, the half cycle mode use the half periods as periods on / off. Positive cycles and negatives are balanced to ensure that there are no DC components.

This firing mode is suggested for shortwave infrared lamp.



The following example describe the mode at 33%, 50% and 66%.

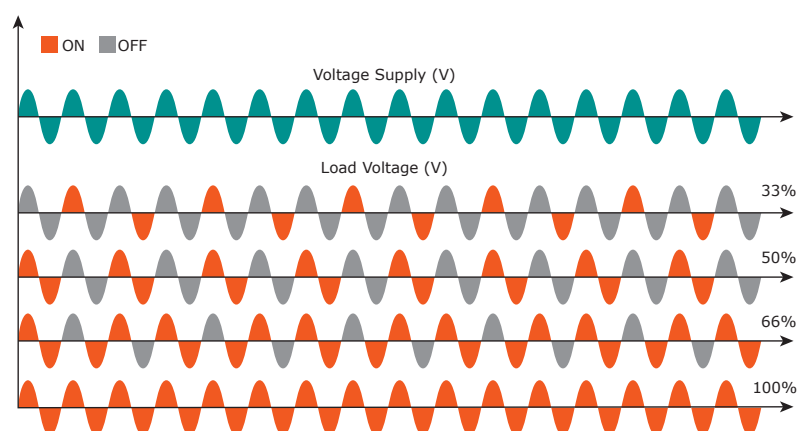

15

Current Limit

The Current Limit is available on REVEX with Phase Angle firing mode only.
It control the firing angle of the thyristor to maintain the three RMS current under the set value.
When the current exceeds this value, the voltage is decreased up to reach the current limit set.

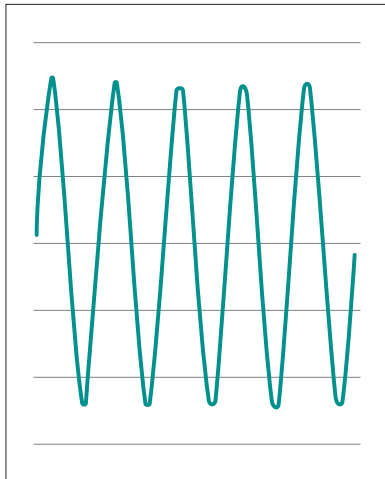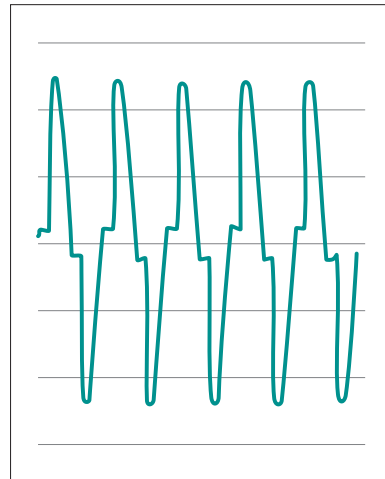I load ≤ I limit set**I load > I limit set**

15.1 Current Limit Setting

The setting of the current limit value can be done in two ways: Digital or Analogic.

- **Digital:** Set the parameter from the hardware menu
Set the current limit value by the parameter . from 0 to 100% of the Current. (Operator menu)
- **Analogic:** Set the parameter from the hardware menu
The value of the Current Limit is setted with analog input 2 Terminals 11 (-) e 4 (+).

This analog input is 0 – 10V and input impedance 10Kohm.

The settings functions by the analogic input 2 is called also External current limit profile because allows to change the profile of the Current Limit during the process.



Caution: this procedure must be performed only by qualified persons.

15.2 Current Limit tuning procedure

- Give the power supply and set the current limit to zero:
 - In analog mode, set the analog input 2 to zero
 - In digital mode, set the parameter=0
- Start the thyristor unit.
- Set the primary input or the setpoint value at 100%
- Increase the current limit
 - In analog mode increase the value of the analog input
 - In digital mode increase the parameter until to reach the desired value of rms current .
- Stop the thyristor unit.

The Current Limit Procedure is done.

16

Heater bakeout function


This functionality can also be configured to operate with special heaters: MoSi₂, SiC, and magnesium oxide (MgO) insulated heaters.

If maximum power is applied, excessive current can damage the heater or fuses. The heater's Heater Bakeout function limits the voltage and current applied while the heater is returned to service.


Select 'Warm-up strategy' mode from the configurator software:

Select the "Current Ramp (MOSI)" function for molybdenum disilicide (MoSi₂) heating elements and MgO



Select the "Power Ramp (SIC)" function for Silicon Carbide (SiC) resistors

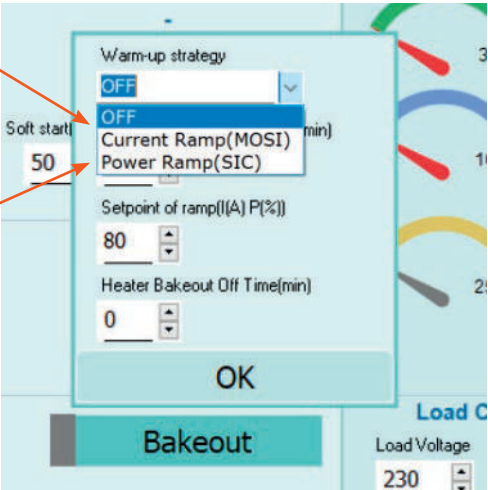

MoSi₂ elements

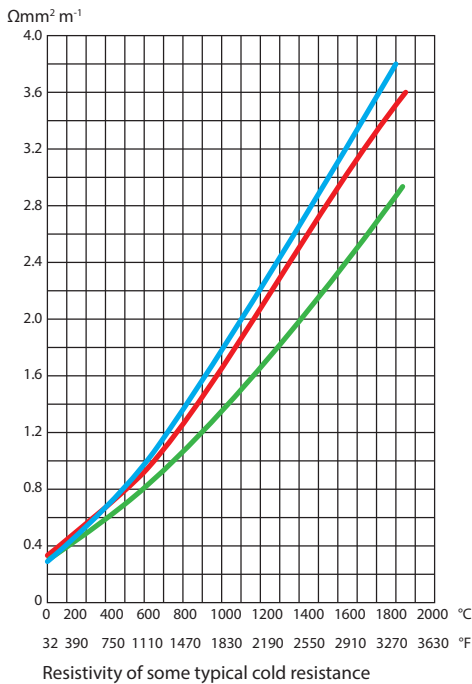

SiC elements

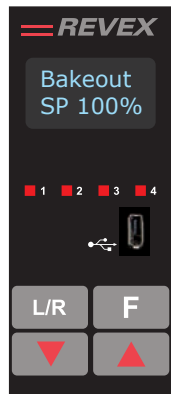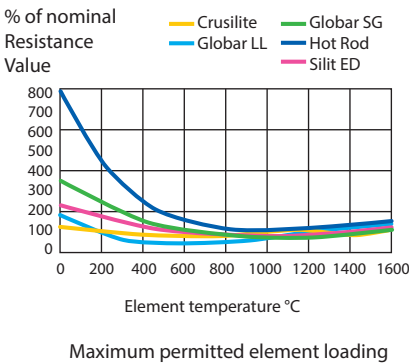

Heater bakeout Indication
(only in Version with Display:
Standard version or
Option Code 0/6/7/9)

While performing the heater bakeout function, the power controller displays a message

16.1 Using Heater Bakeout

While the Heater Bakeout function is active, the REVEX power controller increases the voltage according to the value (current or power) set by the user and the ramp time parameters for the Heater Bakeout function. The Heater Bakeout function does not ramp the output above the normal process setpoint. Once the function has run for the user-set time, the bakeout function terminates and the power controller attempts to perform control to set point normally.

From configurator software, **select "Warm-up strategy" mode**

Use **"Heater Bakeout Ramp Time (min)"** to set the ramp duration in minutes.

Range: 1-1.999 min

Default: 1

Menu: Advanced Setup (read/write)

Use **"Setpoint of ramp(I(A)P(%))"** to set the setpoint current in Amps if MoSi2 is used, or % of Power relative to the nominal load power if SiC elements are used.

Range: 0-999.9A (I) / 0-100% (P)

Default: 0





Menu: Advanced Setup (read/write)

Use **"Heater Bakeout Off Time"** to set how many minutes the heater can be switched off for, before Heater Bakeout operation is activated the next time the heater is used.

Range: 1-1.999 min

Default: 1

Menu: Advanced Setup (read/write)

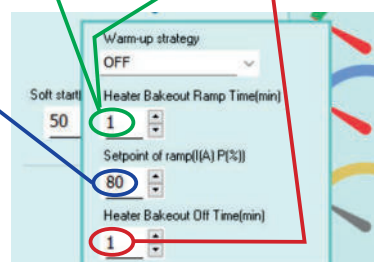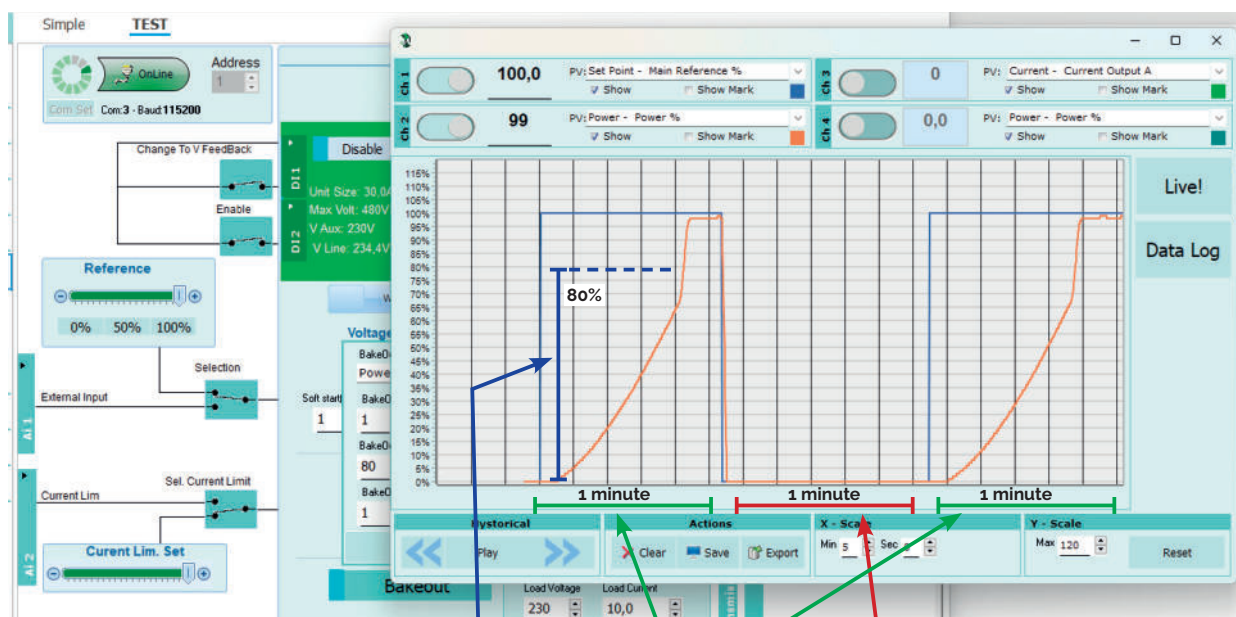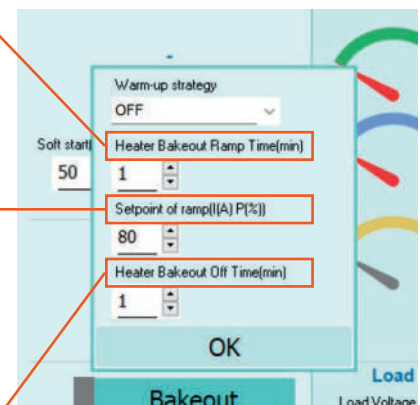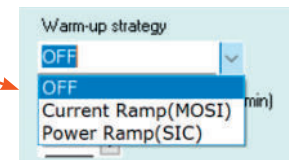

17

Control Mode (feed-back)

The Control Mode (feed-back) type has already configured in line with customer requirements that are defined in the Order Code. The Order Code is written on the identification label.

However, if you wish to change the Control Mode (feed-back) type you can use the software configurator or the Control Panel.



Caution: this procedure must be performed only by qualified persons.

The Control Mode (feed-back) type is defined by the parameter Control Mode (feed-back) in setup menu. If the configurable digital input has set like feed-back Selection, it's possible to change the select feed-back with the Voltage feed-back (V) simply activating the input.

It's possible to have:



V² = Square Voltage feed-back.

The input signal is proportional to the output square voltage. This means that input signal becomes a power demand. The power remains constant if the load impedance doesn't change.



V = Voltage feed-back.

The input signal is proportional to the output voltage. This means that input signal becomes a voltage demand. This control mode compensates the voltage fluctuation of the incoming line supply.



I = Current feed-back.

The input signal is proportional to the current output. This means that input signal becomes a current demand. This control mode maintain the current also if the load impedance changes.



VxI, **P(VxI)** = Power feed-back.

The input signal is proportional to the power output. This means that input signal becomes a power demand. The power remains constant also if voltage and load impedance change. This control mode is used with silicon carbide elements that change its resistive value with temperature and with age. In addition it compensates the voltage fluctuation of the incoming line supply.



I² = Square Current feed-back.

The input signal is proportional to the output square current. This kind of feed-back is suggested for cold resistance applications.



None = No feed-back Open Loop. The input is proportional to the firing angle (α).



EXT, **External** = External feed-back (0÷10V, 4÷20mA, 0÷20mA).

The input signal is proportional to an external signal. This means that input signal becomes a demand to maintain this signal always constant. This control mode is used for example with galvanic systems, where it's necessary to control the current value through the electrodes.

18

Electronic boards

18.1 Supply the Electronic Board

The REVEX thyristor unit, to work, requires a voltage supply for the electronic boards of 24Vdc 500 mA on terminal M3 (1-; 2+).



Warning: Before connecting or disconnecting the unit check that power and control cables are isolated from voltage sources.

19

RS485 Serial port


M3 Terminal	Description
3	RS485 A+
4	RS485 B-

The serial communication port RS485 is available on the Command Terminals.
On this port may be done a network up to 127 REVEX.

Warning: It is not possible to remove the M3 connector when the unit is powered. Remove the AUX 24Vdc power supply before extracting the M3 connector.

Extracting the M3 connector with the AUX 24Vdc power supply connected to the M3 terminal could damage the unit

TOP VIEW

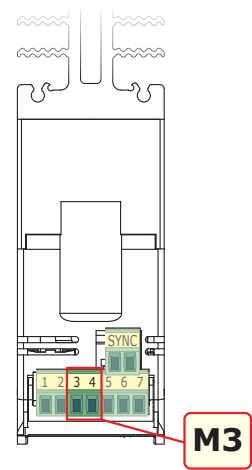

19.1 Fieldbus Module

Technical specification

- Up to n°14 REVEX can be connected for each terminal module
- Main process variable available
- 24Vdc Power Supply
- Simplified configuration

TU-RS485-TCP-3580MB



TU-RS485-PNT-067602
TU-RS485-EIP-067591



	1	2		3	4	5	6	7		8	9	10		11	12	13	14	15	16
ORDER CODE*	T	U	-	R	S	4	8	5	-	-	-	-	-	-	-	-	-	-	-

COMMUNICATION				3	4	5	6	7
Modbus RTU				R	S	4	8	5

FIELDBUS, COMMUNICATION OR OTHER FUNCTIONS		8	9	10		11	12	13	14	15	16
Modbus TCP Protocol Converter	-	T	C	P	-	3	5	8	0	M	B
Modbus TCP, Modbus Slave, IO, Data Logger, Logic	-	E	T	H	-	I	O	D	L	0	0
Profinet	-	P	N	T	-	0	6	7	6	0	2
Ethernet IP	-	E	I	P	-	0	6	7	5	9	1
RS232	-	2	3	2	-	3	5	8	0	2	W

*Contact your sales representative for more information

20

Fuses and Fuse Holder




Warning: REVEX unit must be protected against short circuit by High speed fuses.

The fuses must be with proper I^2t lower than the thyristor one. The warranty of thyristor is null if no proper fuses are used.


High speed fuses are only used for the thyristor protection and can not be used to protect the installation.

Fuse Holder
Size 30A - 35A - 40A

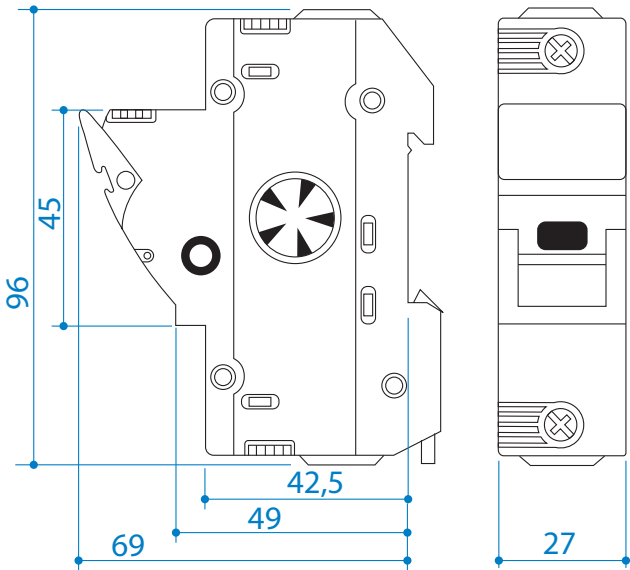

Fuses and Fuse Holder Codes for CE

Type	Fuse Code Spare Part	Total Current (A _{RMS})	I ² t at 500Vac* (A ² sec.)	Vac	Fuse Holder Code	Quantity
030	FU1451/40A	40	525	660	FFH1451/40A	1
035	FU1451/50A	50	1260	660	FFH1451/50A	1
040	FU1451/50A	50	1260	660	FFH1451/50A	1

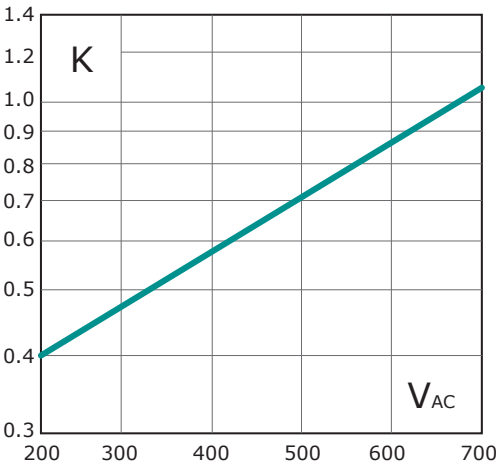

*I²t are multiplied for K value in function of Vac. at 500V K is equal to 0,7 (750 X 0,7 = 525 1800 X 0,7 =1250).
At 660Vac K is equal to 1.



Caution: High speed fuses are used only for the thyristor protection and can not be used to protect the installation.



Caution: The warranty of thyristor is null if no proper fuses are used. See tab.



Warning: When powered, the thyristor unit is subject to dangerous voltages; disconnect from the power supply before opening the fuse box and touching electrical equipments.



CD Automation S.r.l.

Via Picasso, 34/36 - 20025 Legnano (MI)- Italy

Tel. +39 0331 577479 - Fax +39 0331 579479

E-mail: info@cdautomation.com - Web: www.cdautomation.com