

REVO SSR/ANALOG

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
ORDER CODE	S	S	R	-	-	-	-	-	-	-	-	-	-	-	-	-

CURRENT	4	5	6	
description	code		note	
62A	0	6	2	
74A	0	7	4	
90A	0	9	0	

MAX VOLTAGE	7	
description	code	note
480V	4	
600V	6	

VOLTAGE SUPPLY AUX	8	
description	code	note
Without HB no auxiliary voltage supply	0	
24V ac-dc with HB and Analog	4	

INPUT	9	
description	code	note
SSR	S	
0:10V Analog Input	V	2
4:20 mA Analog Input	A	2

FIRING	10	
description	code	note
Zero Crossing	Z	
Random (For connection with REVO PC)	R	
Burst firing 4 Cycles on at 50% Power Demand	4	
Burst firing 8 Cycles on at 50% Power Demand	8	
Burst firing 16 Cycles on at 50% Power Demand	6	

CONTROL MODE	11	
description	code	note
Open Loop	0	

FUSES & OPTION	12	
description	code	note
Fuse + Fuse Holder	F	
Fuse + Fuse Holder + CT	Y	
Fuse + Fuse Holder + CT + HB	H	2
Fuse + Fuse Holder + CT + HB + Flat Cable	X	2

FAN VOLTAGE	13	
description	code	note
No fan	0	

APPROVALS	14	
description	code	note
CE EMC For European Market	0	

MANUAL	15	
description	code	note
None	0	
Italian	1	
English	2	
German	3	
French	4	

VERSION	16	
description	code	note
Std version	1	
High Sensitivity HB below 5A	5	

Note (2) Option available only with fuse + fuse holder.
All the Revo Analog version have fuse + fuse holder.