

REVO SX 3,5-7A

	1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	16
ORDER CODE	R	S	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-

NUMBER OF ZONES X CURRENT RATING	4	5	6
description	code		
4 zones 3,5A each	4	0	3
3 zones 4,5A each	3	0	4
2 zones 7A each	2	0	7

MAX VOLTAGE	7
description	code
230V	2
480V	4

VOLTAGE SUPPLY AUX	8
description	code
No Auxiliary Voltage with 230V	0
24 Vdc with 480V	4

INPUT	9
description	code
SSR	S

FIRING	10
description	code
Zero Crossing	Z
Random (used with REVO-PC)	R

CONTROL MODE	11
description	code
Open Loop	0

FUSES & OPTION	12
description	code
Fuse + Fuse Holder	F

FAN VOLTAGE	13
description	code
No Fan Voltage	0

APPROVALS	14
description	code
CE EMC For European Market	0

MANUAL	15
description	code
None	0
Italian	1
English	2
German	3
French	4

VERSION	16
description	code
Version 1	1

REVO SX 50-90A

	1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	16
ORDER CODE	R	S	X	-	-	-	-	-	-	-	-	-	-	-	-	-	-

NUMBER OF ZONES X CURRENT RATING	4	5	6
description	code		
2 zones 50A each	2	5	0
2 zones 60A each	2	6	0
2 zones 75A each	2	7	5
2 zones 90A each	2	9	0
3 zones 50A each	3	5	0
3 zones 60A each	3	6	0
3 zones 75A each	3	7	5
3 zones 90A each	3	9	0

MAX VOLTAGE	7
description	code
480V	4
600V	6

VOLTAGE SUPPLY AUX	8
description	code
No Auxiliary Voltage	0

INPUT	9
description	code
SSR	S

FIRING	10
description	code
Zero Crossing	Z

CONTROL MODE	11
description	code
Open Loop	0

FUSES & OPTION	12
description	code
Integrated fuses	F

FAN VOLTAGE	13
description	code
No Fan Voltage (only RSX250)	0
Standard: 24Vdc Fan (All unit with exception of RSX250)	3

APPROVALS	14
description	code
CE EMC For European Market	0

MANUAL	15
description	code
None	0
Italian	1
English	2
German	3
French	4

VERSION	16
description	code
Version 1	1